

# Rosemount 8800D Series Vortex Flowmeter



## **HART® and FOUNDATION™ fieldbus Protocols**

- All welded, non-clog design provides maximum performance, reliability and enhanced safety by eliminating ports and gaskets. No seals, just steel.
- CriticalProcess™ Vortex eliminates bypass piping and optimizes safety during sensor health verification.
- Available with optional multivariable output. Internal temperature compensation provides cost-effective saturated steam mass flow measurement.
- Adaptive Digital Signal Processing (ADSP) provides vibration immunity and flow range optimization.
- Reducer™ Vortex extends the measurable flow range, reduces installation costs, and minimizes project risk.
- Simplified troubleshooting through device diagnostics and meter verification.
- Available in wafer, flanged, dual, reducer and high pressure designs.



## The Rosemount 8800D delivers reliability and maximum process availability

- Rosemount Reliability -The 8800D Vortex eliminates impulse lines, ports, and gaskets to improve reliability.
- Non-clog Design - Unique all welded, gasket-free construction which has no ports or crevices that can clog.
- Vibration Immunity - Mass balancing of the sensor system, and Adaptive Digital Signal Processing (ADSP) provide vibration immunity.
- Replaceable Sensor - The sensor is isolated from the process and can be replaced without breaking the process seal. All line sizes use the same sensor design allowing a single spare to serve every meter.
- Simplified Troubleshooting - Device Diagnostics enable field verification of meter electronics and sensor without process shutdown.



## The Rosemount 8800D offering

- The 8800D is available in wafer style meter bodies for 1/2 through 8-in. line sizes, and ASME B16.5, EN 1092-1, or JIS B2220 flanged style meter bodies for 1/2 through 12-in. line sizes.
- Alignment rings, provided with each wafer-style flowmeter, ensure that the meter body is properly centered with the adjacent piping.
- The wafer, flanged, and weld end style meter bodies are available in 316 stainless steel and nickel alloy materials of construction.
- Available up to ASME B16.5 class 1500 for 1 through 8-in. (25 mm through 200 mm) line sizes.

Available with FOUNDATION fieldbus functionality which includes Device Diagnostics and PlantWeb® Alerts.

### Contents

|                            |    |                              |    |
|----------------------------|----|------------------------------|----|
| Ordering Information ..... | 7  | Product Certifications ..... | 29 |
| Specifications .....       | 14 | Dimensional Drawings .....   | 35 |
| Typical Flow Ranges .....  | 19 |                              |    |

## The Rosemount 8800D Critical Process Vortex increases process availability and enhances overall safety

- Eliminate bypass piping for critical process installations  
Traditional vortex installations in critical applications include a bypass line to allow process fluid to be re-directed around the vortex flow meter during routine sensor maintenance. Rosemount's unique non-wetted sensor can be installed without bypass piping, even in the most difficult process environments.
- Improve process availability  
Eliminate the need to shut down the process during routine maintenance and meter verification.
- Enhances safety in hazardous process fluid applications  
A needle valve enables access to the sensor cavity to verify that no process fluid is present.
- Available in Flanged, Reducer, and Dual Vortex meter designs in 1 through 12 inch meter body sizes for ASME B16.5 flange connections. Available in 40 through 300 mm meter body sizes for EN 1092-1 and JIS B2220 flange connections.



## The 8800DD Dual Sensor Vortex provides enhanced safety



1/2" through 4" design

6" through 12" design

- Safety Integrated Systems (SIS) - Ideal solution where redundant flow signals are required.
- Rosemount Reliability - Designed with same electronics, sensor, and meter body as the 8800D.
- Redundant Flow Measurement - The Dual Vortex meter is constructed of two complete vortex meters: sensor, electronics, and shedder bar. The 6- through 12-inch design leverages a single shedder bar for both sensors, maintaining redundancy while reducing the lay-length of the flowmeter body. The meters are flow calibrated to provide an accurate single flowmeter with two independent flow measurements.
- Available as flanged meter for 1/2-in. through 12-in. stainless steel and nickel alloy materials of construction.

## The Rosemount 8800D MultiVariable™ Vortex reduces installation costs, simplifies installation, and improves performance in saturated steam.



- Available with Flow Computer for additional functionality. Integrating the MultiVariable Vortex with a pressure transmitter for full pressure and temperature compensation of superheated steam and various gases provides the following additional functionality:
  - Remote Communications
  - Heat Flow Calculations
  - Remote Totalization
  - Peak Demand Calculation
  - Data Logging Capabilities

- MultiVariable Vortex Design  
Incorporates temperature sensor into the vortex meter using the shedder bar as a thermowell, which keeps the vortex and temperature sensors isolated from process for easy verification and replacement.
- Increased performance in Saturated Steam  
Performance in saturated steam is improved due to the fact that the electronics will be compensating for changes in the process temperature.
- Temperature Compensated Capability for Saturated Steam  
Calculates density from measured process temperature and uses the calculated density to provide a temperature compensated mass flow.
- Reduces Installed Costs  
MultiVariable Vortex eliminates the need for an external thermowell and temperature sensor.
- Available with Flanged and Reducer Vortex in 1 1/2 through 12 inch meter body sizes



See Product Data Sheet 00813-0100-4005 for more information on the Rosemount Flow Computer.

## The Rosemount 8800D offers a wide range of wetted materials to accommodate the most demanding process applications.



### Carbon steel

- Carbon steel vortex meters offer resistance against stress cracking and are available in both high (min temp 32 °F/0 °C) and low (min temp -40 °F/-40 °C) temperature carbon steel.
- Carbon Steel is available in a full range of offerings as A105N forged and WCB cast materials for high temperature and LF2 forged and LCC cast materials for low temperature applications.

### Super duplex

- The UNS S32760 wrought and 6A cast super duplex stainless steel material allows for increased chloride corrosion resistance.
- The super duplex material properties allow for increased pressure class ratings up to class 900 for 10 in and 12 in line sizes.
- Super duplex is available as flanged and dual meters in 6-in. through 12-in. line sizes, 8-in. through 12-in. for reducer.

Also available in Stainless Steel and Nickel Alloy.

## The Armored Remote cable allows for remote electronics mounting while protecting the cable, maximizing reliability, and eliminating the need for conduit in many installations.

- Improved protection against abrasion, impact, and moisture.
- Available in 10, 20, 33, 50, and 75 foot lengths.
- Two aluminum glands are provided to securely connect cable to transmitter and meter body.
- Available with stainless steel glands when ordered in conjunction with stainless steel electronics housing.



## Rosemount 8800D Vortex Flowmeter with FOUNDATION fieldbus

The software for the 8800D Flowmeter with FOUNDATION fieldbus permits remote testing and configuration using any FOUNDATION fieldbus-compliant host, such as the DeltaV™ system from Emerson Process Management.

### Transducer block

The transducer block calculates flow from sensor frequency. The calculation includes information about damping, shedding frequency, K-factor, process fluid, pipe ID, and diagnostics.

### Resource block

The resource block contains physical transmitter information, including available memory, manufacturer identification, device type, software tag, and unique identification.

### Backup Link Active Scheduler (LAS)

The transmitter is classified as a device link master. A device link master can function as an LAS if the current link master device fails or is removed from the segment.

The host or other configuration tool is used to download the schedule for the application to the link master device. In the absence of a primary link master, the transmitter will claim the LAS and provide permanent control for the H1 segment.

### Diagnostics

The transmitter automatically performs continuous self-diagnostics. The user can perform on-line testing of the transmitter digital signal. Advanced simulation diagnostics are available. This enables remote verification of the electronics via a flow signal generator built into the electronics. The sensor strength value can be used to view the process flow signal and provide information regarding filter settings.

## FOUNDATION fieldbus function blocks

### Analog input

The AI function block processes the measurement and makes it available to other function blocks. The AI function block also allows filtering, alarming, and engineering unit changes.

The 8800D Flowmeter with FOUNDATION fieldbus comes with five AI function blocks. Two of the AI function blocks, flow and signal strength, come as standard. Three additional AI function blocks are available when the MTA option is selected: electronics temperature, process temperature, and process density. Note that process density is only available when the process fluid is configured as temperature compensated saturated steam, shown as TComp Sat Steam in the device.

### Proportional/Integral/Derivative

The optional PID function block provides a sophisticated implementation of the universal PID algorithm. The PID function block features input for feed forward control, alarms on the process variable, and control deviation. The PID type (series or Instrument Society of America [ISA]) is user-selectable on the derivative filter.

### Integrator

The standard integrator block is available for totalization of flow.

### Arithmetic

The standard arithmetic block is available for various computations.

### Setup

Basic setup requires connecting the transmitter to a fieldbus network or Field Communicator. The FOUNDATION fieldbus-compliant host will automatically establish communication with the device.

The Rosemount 8800D Flowmeter can be easily configured using the DeltaV system. User-configurable parameters include: tag, scaling and units, process fluid type, damping, fixed process density, pipe inside diameter (ID)<sup>(1)</sup>, and fixed process temperature<sup>(1)</sup>.

Tagging information can be entered into the transmitter to allow identification and a physical description. 32-character tags are provided for identification of the transmitter and each function block.

---

(1) Process temperature and pipe ID have known effects on the K-factor. The 8800D software automatically accounts for these effects by compensating the K-factor.



## Ordering Information

**Table 1. Rosemount 8800D Vortex Flowmeter**

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery.

The Expanded offering is subject to additional delivery lead time.

| Model                                | Product description  |   |
|--------------------------------------|--|---|
| 8800D                                | Vortex Flowmeter   |   |
| <b>Meter style</b>                   |  |   |
| F                                    | Flanged style  | ★ |
| W                                    | Wafer style  | ★ |
| R                                    | Reducer Style (Flanged style only)   | ★ |
| D                                    | Dual-sensor style (Flanged style only)   |   |
| <b>Line size</b>                     |  |   |
| 005                                  | 1/2-in. (15 mm) (Not available for Rosemount 8800DR)   | ★ |
| 010                                  | 1-in. (25 mm)  | ★ |
| 015                                  | 1 1/2-in. (40 mm)  | ★ |
| 020                                  | 2-in. (50 mm)  | ★ |
| 030                                  | 3-in. (80 mm)  | ★ |
| 040                                  | 4-in. (100 mm)   | ★ |
| 060                                  | 6-in. (150 mm)   | ★ |
| 080                                  | 8-in. (200 mm)   | ★ |
| 100                                  | 10-in. (250mm)   |   |
| 120                                  | 12-in. (300mm)   |   |
| <b>Wetted materials</b>              |  |   |
| S                                    | 316 wrought stainless and CF-3M cast stainless<br>Note: Material of construction is 316/316L   | ★ |
| H                                    | UNS N06022 wrought Nickel Alloy; CW2M cast Nickel Alloy<br>Note: See <a href="#">Table 2</a> . |   |
| C                                    | A105 forged carbon steel and WCB cast carbon steel   |   |
| L                                    | LF2 forged carbon steel and LCC cast carbon steel  |   |
| D <sup>(1)</sup>                     | UNS S32760 wrought duplex stainless steel and 6A cast duplex stainless steel                   |   |
| <b>Flange or alignment ring size</b> |  |   |
| A1                                   | ASME B16.5 (ANSI) RF Class 150   | ★ |
| A3                                   | ASME B16.5 RF Class 300  | ★ |
| K1                                   | EN 1092-1 PN 16 (PN 10/16 for wafer style) Type B1   | ★ |
| K3                                   | EN 1092-1 PN 40 (PN 25/40 for wafer style) Type B1   | ★ |
| A6                                   | ASME B16.5 RF Class 600  |   |
| A7 <sup>(2)</sup>                    | ASME B16.5 RF Class 900  |   |
| A8 <sup>(3)</sup>                    | ASME B16.5 RF Class 1500   |   |
| B1 <sup>(4)</sup>                    | ASME B16.5 RTJ Class 150 for flange-style only   |   |

**Table 1. Rosemount 8800D Vortex Flowmeter**

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery.

The Expanded offering is subject to additional delivery lead time.

|                      |  |  |
|----------------------|--|--|
| B3                   | ASME B16.5 RTJ Class 300 for flange-style only     |  |
| B6                   | ASME B16.5 RTJ Class 600 for flange-style only     |  |
| B7 <sup>(2)</sup>    | ASME B16.5 RTJ Class 900 for flange-style only     |  |
| B8 <sup>(3)</sup>    | ASME B16.5 RTJ Class 1500 for flange-style only    |  |
| C1                   | ASME B16.5 RF Class 150, smooth finish             |  |
| C3                   | ASME B16.5 RF Class 300, smooth finish             |  |
| C6                   | ASME B16.5 RF Class 600, smooth finish             |  |
| C7 <sup>(2)</sup>    | ASME B16.5 RF Class 900, smooth finish             |  |
| C8 <sup>(3)</sup>    | ASME B16.5 RF Class 1500, smooth finish            |  |
| K0                   | EN 1092-1 PN 10 Type B1                            |  |
| K2                   | EN 1092-1 PN 25 Type B1                            |  |
| K4                   | EN 1092-1 PN 63 Type B1                            |  |
| K6                   | EN 1092-1 PN 100 Type B1                           |  |
| K7 <sup>(2)</sup>    | EN 1092-1 PN 160 Type B1                           |  |
| L0                   | EN 1092-1 PN 10 Type B2                            |  |
| L1                   | EN 1092-1 PN 16 (PN 10/16 for wafer style) Type B2 |  |
| L2                   | EN 1092-1 PN 25 Type B2                            |  |
| L3                   | EN 1092-1 PN 40 (PN 25/40 for wafer style) Type B2 |  |
| L4                   | EN 1092-1 PN 63 Type B2                            |  |
| L6                   | EN 1092-1 PN 100 Type B2                           |  |
| L7 <sup>(2)</sup>    | EN 1092-1 PN 160 Type B2                           |  |
| M0                   | EN 1092-1 PN 10 Type D for flange style only       |  |
| M1                   | EN 1092-1 PN 16 Type D for flange style only       |  |
| M2                   | EN 1092-1 PN 25 Type D for flange style only       |  |
| M3                   | EN 1092-1 PN 40 Type D for flange style only       |  |
| M4                   | EN 1092-1 PN 63 Type D for flange style only       |  |
| M6                   | EN 1092-1 PN 100 Type D for flange style only      |  |
| M7 <sup>(2)</sup>    | EN 1092-1 PN 160 Type D for flange style only      |  |
| J1                   | JIS 10K  |  |
| J2                   | JIS 20K  |  |
| J4                   | JIS 40K  |  |
| W1 <sup>(5)</sup>    | Weld End, Schedule 10S                             |  |
| W4 <sup>(5)</sup>    | Weld End, Schedule 40S                             |  |
| W8 <sup>(5)</sup>    | Weld End, Schedule 80S                             |  |
| W9 <sup>(4)(5)</sup> | Weld End, Schedule 160S                            |  |



**Table 1. Rosemount 8800D Vortex Flowmeter**

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery.

The Expanded offering is subject to additional delivery lead time.

| Sensor process temperature range |   |   |
|----------------------------------|---|---|
| N                                | Standard: -40 to 450°F (-40 to 232°C)                         | ★ |
| E                                | Extended: -330 to 800°F (-200 to 427°C)                       | ★ |
| S                                | Severe Service: -330 to 800 °F (-200 to 427 °C)               |   |
| Conduit entry                    |   |   |
| 1                                | 1/2 -14 NPT – Aluminum Housing                                | ★ |
| 2                                | M20 x 1.5 – Aluminum Housing                                  | ★ |
| 3                                | PG 13.5 – Aluminum Housing                                    | ★ |
| 4                                | G <sup>1/2</sup> (One Conduit Entry) – Aluminum Housing       | ★ |
| 5                                | G <sup>1/2</sup> (Two Conduit Entries) – Aluminum Housing     | ★ |
| 6 <sup>(6)</sup>                 | 1/2 - 14 NPT - SST Housing                                    |   |
| 7 <sup>(6)</sup>                 | M20 x 1.5 - SST Housing                                       |   |
| Outputs                          |   |   |
| D                                | 4-20 mA digital electronics (HART protocol)                   | ★ |
| P                                | 4-20 mA digital electronics (HART protocol) with scaled pulse | ★ |
| F                                | FOUNDATION fieldbus digital signal                            | ★ |
| Calibration                      |   |   |
| 1                                | Flow calibration  | ★ |

## Options

| Multivariable options              |  |   |
|------------------------------------|--|---|
| MTA <sup>(7)</sup>                 | MultiVariable output with Integral Temperature Sensor                              |   |
| Hazardous locations certifications |  |   |
| E5                                 | FM Explosion-proof; Dust Ignition-proof  | ★ |
| I5                                 | FM Intrinsically Safe; Non-incendive   | ★ |
| IE <sup>(8)</sup>                  | FM FISCO Intrinsically Safe  | ★ |
| K5                                 | FM Explosion-proof; Intrinsically Safe; Non-incendive; Dust Ignition-proof         | ★ |
| E6                                 | CSA Explosion-proof; Division 2 Dust Ignition-proof                                | ★ |
| I6                                 | CSA Intrinsically Safe   | ★ |
| IF <sup>(8)</sup>                  | CSA FISCO Intrinsically Safe   | ★ |
| K6                                 | CSA Explosion-proof; Intrinsically Safe; Division 2; Dust-Ignition-proof           | ★ |
| KB                                 | FM and CSA Explosion-proof, Dust Ignition-proof, Intrinsically Safe, Non-incendive | ★ |
| E1                                 | ATEX Flameproof  | ★ |
| I1                                 | ATEX Intrinsic Safety ia; Intrinsic Safety ic                                      | ★ |
| IA <sup>(8)</sup>                  | ATEX FISCO Intrinsic Safety  | ★ |
| N1                                 | ATEX Type n  | ★ |

**Table 1. Rosemount 8800D Vortex Flowmeter**

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery.

The Expanded offering is subject to additional delivery lead time.

|                                       |  |   |
|---------------------------------------|--|---|
| ND                                    | ATEX Dust  | ★ |
| K1                                    | ATEX Flameproof; Intrinsic Safety; Type n; Dust                                      | ★ |
| E7                                    | IECEX Flameproof   | ★ |
| I7                                    | IECEX Intrinsic Safety   | ★ |
| IG <sup>(8)</sup>                     | IECEX FISCO Intrinsic Safety   | ★ |
| N7                                    | IECEX Type n   | ★ |
| K7                                    | IECEX Flameproof; Intrinsic Safety; Type n; Dust                                     | ★ |
| E2                                    | INMETRO Flameproof   | ★ |
| I2                                    | INMETRO Intrinsic Safety   | ★ |
| E3                                    | China Flameproof; Dust   | ★ |
| I3                                    | China Intrinsic Safety   | ★ |
| N3                                    | China Type n   | ★ |
| IH <sup>(8)</sup>                     | China FISCO/FNICO Intrinsic Safety   | ★ |
| K3                                    | China Flameproof; Dust; Intrinsic Safety; Type n                                     | ★ |
| E4 <sup>(9)</sup>                     | TIIS Flameproof  | ★ |
| IB <sup>(8)</sup>                     | INMETRO FISCO Intrinsic Safety   | ★ |
| <b>PlantWeb control functionality</b> |  |   |
| A01 <sup>(10)</sup>                   | Basic Control: One Proportional/Integral/Derivative (PID) Function Block             | ★ |
| <b>Conduit electrical connector</b>   |  |   |
| GE <sup>(11)</sup>                    | M12, 4-pin, Male Connector (eurofast <sup>®</sup> )                                  |   |
| GM <sup>(11)</sup>                    | A size Mini, 4-pin, Male Connector (minifast <sup>®</sup> )                          |   |
| GN                                    | ATEX Flameproof A size, Mini 4-pin male connector (minifast)                         |   |
| <b>Other options</b>                  |  |   |
| C4 <sup>(12)</sup>                    | NAMUR alarm and saturation values, high alarm  | ★ |
| CN <sup>(12)</sup>                    | NAMUR alarm and saturation values, low alarm   | ★ |
| V5                                    | External ground screw assembly   | ★ |
| T1                                    | Transient protection terminal block  | ★ |
| P2                                    | Cleaning for special services  | ★ |
| PD                                    | Pressure Equipment Directive (PED, per 97/23/EC)                                     | ★ |
| M5                                    | LCD indicator  | ★ |
| R10                                   | Remote electronics with 10 ft (3,0 m) cable  | ★ |
| R20                                   | Remote electronics with 20 ft (6,1 m) cable  | ★ |
| R30                                   | Remote electronics with 30 ft (9,1 m) cable  | ★ |
| R33                                   | Remote electronics with 33 ft. (10.1m) cable   | ★ |
| R50                                   | Remote electronics with 50 ft (15.2 m) cable   | ★ |
| RXX <sup>(13)</sup>                   | Remote electronics with customer-specified cable length (up to 75 ft (23 m) maximum) |   |

**Table 1. Rosemount 8800D Vortex Flowmeter**

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery.

The Expanded offering is subject to additional delivery lead time.

|                              |   |   |
|------------------------------|---|---|
| A10                          | Armored remote electronics with 10 ft (3.0 m) cable   |   |
| A20                          | Armored remote electronics with 20 ft (6.1 m) cable   |   |
| A33                          | Armored remote electronics with 33ft (10.1 m) cable   |   |
| A50                          | Armored remote electronics with 50 ft (15.2 m) cable  |   |
| A75                          | Armored remote electronics with 75ft (22.9 m) cable   |   |
| CPA <sup>(14)</sup>          | CriticalProcess Online Sensor   |   |
| <b>Certification options</b> |   |   |
| Q4                           | Certificate of Calibration - Consistent with ISO 10474 3.1B or EN 10204 3.1                                       | ★ |
| Q8                           | Material traceability certification per ISO 10474 3.1B and EN 10204 3.1   | ★ |
| Q25                          | NACE <sup>®</sup> MR0103 Certificate of Compliance  | ★ |
| Q69 <sup>(15)</sup>          | Inspection certificate weld examination (wafer) per ISO 10474 3.1B and EN 10204 3.1                               | ★ |
| Q70                          | Inspection certificate weld examination (flanged) per ISO 10474 3.1B and EN 10204 3.1                             |   |
| Q71                          | Inspection certification weld examination (flanged) per ISO 10474 3.1B (includes x-rays) and EN 10204 3.1         |   |
| Q72                          | Inspection certification weld examination (flanged) per ISO 10474 3.1B (includes x-rays on film) and EN 10204 3.1 |   |
| Q76                          | Certification of Positive Material Identification   | ★ |
| Q79                          | Certification for Combo PQR/WPQ/WPS with Weld Maps  | ★ |
| QC2                          | Visual and Dimensional, Quantity, Display and Configuration Inspection with Certificate                           |   |
| J2                           | ASME B31.1 General Compliance (carbon steel only)   |   |
| J7                           | ASME B31.1 Boiler External Piping (BEP) Code Stamp (carbon steel only)  |   |
| QKH                          | KHK Documentation Package   |   |
| QP                           | Calibration certification and tamper evident seal   | ★ |
| SBS                          | ABS (American Bureau of Shipping)   |   |
| SBV                          | Bureau Veritas  |   |
| SDN                          | Det Norske Veritas  |   |
| SLL                          | Lloyd's Register (LR) Type Approval   |   |

**Table 1. Rosemount 8800D Vortex Flowmeter**

★ The Standard offering represents the most common options. The starred options (★) should be selected for best delivery.

The Expanded offering is subject to additional delivery lead time.

| Quick Start Guide (QSG) language options (default is English) |                        |   |
|---|------------------------|---|
| YA  | Danish QIG             | ★ |
| YB  | Hungarian QIG          | ★ |
| YC  | Czech QIG              | ★ |
| YD  | Dutch QIG              | ★ |
| YF  | French QIG             | ★ |
| YG  | German QIG             | ★ |
| YH  | Finnish QIG            | ★ |
| YI  | Italian QIG            | ★ |
| YJ  | Japanese QIG           | ★ |
| YM  | Chinese (Mandarin) QIG | ★ |
| YN  | Norwegian QIG          | ★ |
| YL  | Polish QIG             | ★ |
| YP  | Portuguese QIG         | ★ |
| YR  | Russian QIG            | ★ |
| YS  | Spanish QIG            | ★ |
| YW  | Swedish QIG            | ★ |
| <b>Typical model number: 8800D F 020 S A1 N 1 D 1 M5</b>      |                        |   |

- (1) Available in Flanged and Dual from 6-in. through 12-in. and Reducer from 8-in. through 12-in. Class 1500 in 6-in. and 8-in. meterbody sizes and class 900 in 10 through 12-in. meterbody sizes.
- (2) Available on flanged and dual style meters from 1/2" - 8" (15-200 mm) and reducer style meters from 1" - 8" (25 - 200 mm). Also available in 10"-12" (250-300 mm) flanged and dual meters along with 12" (300mm) reducers when using Super Duplex material of construction.
- (3) Only available for flange and dual style meters from 1-in. through 8-in. (25-200 mm).
- (4) Not available with 1/2-in. line size.
- (5) W1, W4, W8, and W9 are only available with Meter Style F.
- (6) No TIIS approval
- (7) Available with Rosemount 8800DF from 1 1/2-in. (40 mm) through 12-in. (300 mm). Available with 8800DR from 2-in. (50 mm) through 12-in. (300 mm). Not available with 8800DW or 8800DD.
- (8) Fieldbus Intrinsic Safe Concept (FISCO) available with output code F (FOUNDATION Fieldbus digital signal) only.
- (9) TIIS Flameproof Approval requires G1/2 conduit entry.
- (10) Requires output code F.
- (11) Not available with certain hazardous location certifications. Contact a Rosemount representative for details.
- (12) NAMUR compliant operation and the alarm latch options are pre-set at the factory and can be changed to standard operation in the field.
- (13) XX is a customer specified length in feet.
- (14) The CPA option is not available on wafer, 1/2-in. flange, or 1-in. reducer units. In addition it is not available on 1-in. flanged and 1 1/2-in. reducer JIS 10K, EN PN40, or EN PN16. Not available with Super Duplex or B31.1 line sizes greater than 6".
- (15) Q69 available for all Nickel Alloy wafers and stainless steel wafers in line sizes 1/2-in. (15 mm), 6-in. (150 mm), and 8-in. (200 mm).

**Table 2. Method of Construction for the 8800DF/8800DD in Nickel Alloy**

| Line size  | A1 | A3 | A6 | A7 | K1 | K3 | K4 | K6 | K7 |
|--|----|----|----|----|----|----|----|----|----|
| ½ (15)   | C  | C  | C  | W  | W  | W  | NA | W  | W  |
| 1 (25)   | C  | C  | C  | W  | W  | W  | NA | W  | W  |
| 1½ (40)  | C  | C  | C  | W  | W  | W  | NA | W  | W  |
| 2 (50)   | C  | C  | C  | W  | C  | C  | W  | W  | W  |
| 3 (80)   | C  | C  | C  | W  | C  | C  | W  | W  | W  |
| 4 (100)  | C  | C  | C  | W  | C  | C  | W  | W  | W  |
| 6 (150)  | C  | C  | C  | CF | W  | W  | W  | W  | CF |
| 8 (200)  | C  | C  | C  | CF | W  | W  | W  | W  | CF |
| 10 (250)   | W  | W  | W  | NA | W  | W  | W  | W  | NA |
| 12 (300)   | W  | W  | W  | NA | W  | W  | W  | W  | NA |
| C = Nickel Alloy collar and 316 SST lap flange. If weld neck flange is required, V0022 can be ordered. |    |    |    |    |    |    |    |    |    |
| W = Nickel Alloy weld neck flange.   |    |    |    |    |    |    |    |    |    |
| CF = Consult Factory   |    |    |    |    |    |    |    |    |    |
| NA = Not Available   |    |    |    |    |    |    |    |    |    |
| All 8800DR Reducer Vortex Meters with Nickel Alloy materials of construction use weld neck flanges.    |    |    |    |    |    |    |    |    |    |
| Flange codes other than those listed in <a href="#">Table 2</a> all use weld neck flanges.             |    |    |    |    |    |    |    |    |    |

# Specifications

## Functional specifications

### Process fluids

Liquid, gas, and steam applications. Fluids must be homogeneous and single-phase.

### Line sizes

#### Wafer

1/2, 1, 1 1/2, 2, 3, 4, 6, and 8 inches  
(DN 15, 25, 40, 50, 80, 100, 150, and 200)

#### Flanged and dual-sensor style

1/2, 1, 1 1/2, 2, 3, 4, 6, 8, 10, and 12 inches  
(DN 15, 25, 40, 50, 80, 100, 150, 200, 250, and 300)

#### Reducer

1, 1 1/2, 2, 3, 4, 6, 8, 10, and 12 inches  
(DN 25, 40, 50, 80, 100, 150, 200, 250, and 300)

### Pipe schedules

Process piping Schedules 10, 40, 80, and 160.

#### Note

The appropriate bore diameter of the process piping must be entered using the Field Communicator or AMS<sup>®</sup> Device Manager. Meters will be shipped from the factory at the Schedule 40 default value unless otherwise specified.

### Measurable flow rates

Capable of processing signals from flow applications which meet the sizing requirements below.

To determine the appropriate flowmeter size for an application, process conditions must be within the Reynolds number and velocity limitations for the desired line size provided in Table 3, Table 4, and Table 5.

#### Note

Consult your local sales representative to obtain a computer sizing program that describes in greater detail how to specify the correct flowmeter size for an application.

The Reynolds number equation shown below combines the effects of density ( $\rho$ ), viscosity ( $\mu_{cp}$ ), pipe inside diameter ( $D$ ), and flow velocity ( $V$ ).

$$R_D = \frac{VD\rho}{\mu_{cp}}$$

**Table 3. Minimum Measurable Meter Reynolds Numbers**

| Meter sizes (Inches/DN)      | Reynolds number limitations |
|------------------------------|-----------------------------|
| 1/2 through 4/15 through 100 | 5000 minimum                |
| 6 through 12/150 through 300 |                             |

**Table 4. Minimum measurable meter velocities<sup>(1)</sup>**

|                        | Feet per second  | Meters per second |
|------------------------|------------------|-------------------|
| Liquids <sup>(2)</sup> | $\sqrt{36/\rho}$ | $\sqrt{54/\rho}$  |
| Gases <sup>(2)</sup>   | $\sqrt{36/\rho}$ | $\sqrt{54/\rho}$  |

The  $\rho$  is the process fluid density at flowing conditions in lb/ft<sup>3</sup> for ft/s and kg/m<sup>3</sup> for m/s.

- (1) Velocities are referenced to schedule 40 pipe.
- (2) This minimum measurable meter velocity is based on default filter settings.

**Table 5. Maximum Measurable Meter Velocities<sup>(1)</sup> (use the smaller of the two values)**

|                      | Feet per second             | Meters per second             |
|----------------------|-----------------------------|-------------------------------|
| Liquids              | $\sqrt{90,000/\rho}$ or 25  | $\sqrt{134,000/\rho}$ or 7.6  |
| Gases <sup>(2)</sup> | $\sqrt{90,000/\rho}$ or 300 | $\sqrt{134,000/\rho}$ or 91.4 |

The  $\rho$  is the process fluid density at flowing conditions in lb/ft<sup>3</sup> for ft/s and kg/m<sup>3</sup> for m/s.

- (1) Velocities are referenced to schedule 40 pipe.
- (2) Accuracy limitations for gas and steam for Dual-style meters (1/2-in. to 4-in.): max velocity of 100 ft/s (30.5 m/s).

## Process temperature limits

### Standard

–40 to 450 °F (–40 to 232 °C)

### Extended

–330 to 800 °F (–200 to 427 °C)

### Severe

–330 to 800 °F (–200 to 427 °C)

- The meter body and sensor, in remote mount configurations, is functionally rated to 842 °F process temperature. Process temperature may be further restricted depending on hazardous area options and PED certificates. Consult applicable certificates for particular installation limits.
- 157 °F to 800 °F (–105 to 427 °C) for European Pressure Equipment Directive (PED), consult factory for lower temperature requirements.
- The Super Duplex material of construction is limited to use with the standard sensor for –40 to 450 °F (–40 to 232 °C).

### MultiVariable (MTA option)

–40 to 800 °F (–40 to 427 °C)

- Use above 450 °F (232 °C) requires Extended Sensor

## Output signals

### 4–20 mA Digital HART signal

Superimposed on 4–20 mA signal

### Optional scalable pulse output

0 to 10000 Hz; transistor switch closure with adjustable scaling via HART communications; capable of switching up to 30 Vdc, 120 mA maximum

### Digital FOUNDATION fieldbus signal

Completely digital output with FOUNDATION fieldbus communication (ITK 5.2 compliant).

### Analog output adjustment

Engineering units and lower and upper range values are user-selected. Output is automatically scaled to provide 4 mA at the selected lower range value, 20 mA at the selected upper range value. No frequency input is required to adjust the range values.

### Scalable frequency adjustment

The scalable pulse output can be set to a specific velocity, volume, or mass (i.e. 1 pulse = 1 lb). The scalable pulse output can also be scaled to a specific rate of volume, mass, or velocity (i.e. 100 Hz = 500 lb/hr).

## Ambient temperature limits

### Operating

–58 to 185 °F (–50 to 85 °C)

–4 to 185 °F (–20 to 85 °C) for flowmeters with local indicator

### Storage

–58 to 185 °F (–50 to 85 °C)

–50 to 185 °F (–46 to 85 °C) for flowmeters with local indicator

## Pressure limits

### Flange style meter

Rated for ASME B16.5 Class 150, 300, 600, 900, and 1500, EN 1092-1 PN 10, 16, 25, 40, 63, 100, and 160, and JIS 10K, 20K, and 40K

### Reducer style meter

Rated for ASME B16.5 Class 150, 300, 600, and 900, EN 1092-1 PN 10, 16, 25, 40, 63, 100, and 160.

### Dual sensor style meter

Rated for ASME B16.5 Class 150, 300, 600, 900, and 1500, EN 1092-1 PN 10, 16, 25, 40, 63, 100, and 160, and JIS 10K, 20K, and 40K

### Wafer style meter

Rated for ASME B16.5 Class 150, 300, and 600, EN 1092-1 PN 10, 16, 25, 40, 63, and 100, and JIS 10K, 20K, and 40K

---

### Note

All wafer style meters are pressure rated and labeled at 1500 PSI/10.34 MPa at 100 °F/38 °C regardless of alignment ring size code ordered.

---

### Weld-end style meter

W1 Welds to Schedule 10 mating pipe

- 1-4 inch line size 720 psig (4.96 MPa-g)

W4 Welds to Schedule 40 mating pipe

- 1-4 inch line size 1440 psig (9.93 MPa-g)
- 6-12 inch line size 720 psig (4.96 MPa-g)

W8 Welds to Schedule 80 mating pipe

- 1-4 inch line size 2160 psig (14.9 MPa-g)
- 6-12 inch line size 1440 psig (9.93 MPa-g)

W9 Welds to Schedule 160 mating pipe

- 1-4 inch line size 3600 psig (24.8 MPa-g)
  - 6-12 inch line size 2160 psig (14.9 MPa-g)
- 

### Note

1-in. (25 mm), and 1.5-in. (40 mm) weld to Schedule 80 mating pipe.

---

## Power supply

### HART analog

External power supply required. Flowmeter operates on 10.8 to 42 Vdc terminal voltage (with 250-ohm minimum load required for HART communications, 16.8 Vdc power supply is required)

### FOUNDATION fieldbus

External power supply required. Flowmeter operates on 9 to 32 Vdc, 18 mA maximum.


### Power consumption

One watt maximum



**Load limitations (HART analog)**

Maximum loop resistance is determined by the voltage level of the external power supply, as described by:

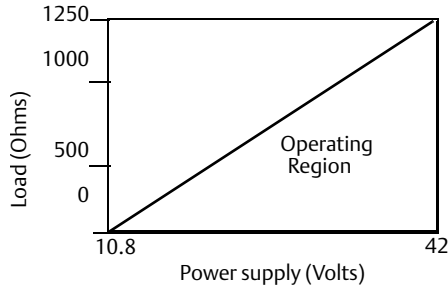

$R_{max} = 41.7(V_{ps} - 10.8)$   
 $V_{ps} =$  Power Supply Voltage (Volts)  
 $R_{max} =$  Maximum Loop Resistance (Ohms)

**Note**

HART Communication requires a minimum loop resistance of 250 ohms.

**Optional LCD indicator**

The optional LCD indicator is capable of displaying:

| HART                                  | FOUNDATION fieldbus                   |
|---------------------------------------|---------------------------------------|
| Primary Variable                      | Primary Variable                      |
| Velocity Flow                         | Percent of Range                      |
| Volumetric Flow                       | Shedding Frequency                    |
| Mass Flow                             | Electronics Temperature (MTA only)    |
| Percent of Range                      | Process Temperature (MTA only)        |
| Analog Output                         | Calculated Process Density (MTA only) |
| Totalizer                             | Integrator Output                     |
| Shedding Frequency                    | Totalizer                             |
| Pulse Output Frequency                |                                       |
| Electronics Temperature               |                                       |
| Process Temperature (MTA only)        |                                       |
| Calculated Process Density (MTA only) |                                       |

If more than one item is selected, the display will scroll through all items selected.

**Enclosure rating**

FM Type 4X; CSA Type 4X; IP66

**Permanent pressure loss**

The approximate permanent pressure loss (PPL) from the Rosemount 8800D Flowmeter is calculated for each application in the Vortex sizing software available from your local Rosemount representative.

The PPL is determined using the equation:

$$PPL = \frac{A \times \rho_f \times Q^2}{D^4}$$

where:

PPL = Permanent Pressure loss (psi or kPa)

Where:

$\rho_f$  = Density at operating conditions (lb/ft<sup>3</sup> or kg/m<sup>3</sup>)

Q = Actual volumetric flow rate (Gas = ft<sup>3</sup>/min or m<sup>3</sup>/hr;

Liquid = gal/min or l/min)

D = Flowmeter bore diameter (in. or mm)

A = Constant depending on meter style, fluid type and flow units. Determined per following table:

**Table 6. Determining the PPL**

| Meter style           | English units          |                        | SI units            |                  |
|-----------------------|------------------------|------------------------|---------------------|------------------|
|                       | A <sub>Liquid</sub>    | A <sub>Gas</sub>       | A <sub>Liquid</sub> | A <sub>Gas</sub> |
| 8800DF/W              | 3.43 10 <sup>-5</sup>  | 1.93 10 <sup>-3</sup>  | 0.425               | 118              |
| 8800DR                | 3.913 10 <sup>-5</sup> | 2.193 10 <sup>-3</sup> | 0.489               | 136              |
| 8800DD <sup>(1)</sup> | 6.123 10 <sup>-5</sup> | 3.423 10 <sup>-3</sup> | 0.765               | 212              |

(1) For all 6-in. thru 12-in. line sizes A is the same for 8800DD and 8800DF

**Minimum downstream pressure (liquids)**

Flow metering conditions that would allow cavitation, the release of vapor from a liquid, should be avoided. This flow condition can be avoided by remaining within the proper flow range of the meter and by following appropriate system design.

For some liquid applications, incorporation of a back pressure valve should be considered. To prevent cavitation, the minimum downstream pressure should be:

$P = 2.9 \times \Delta P + 1.3 \times p_v$  or  $P = 2.9 \times \Delta P + p_v + 0.5$  psia (3.45 kPa)  
 (use the smaller of the two results)

P = Line pressure five pipe diameters downstream of the meter (psia or kPa abs)

$\Delta P$  = Pressure loss across the meter (psi or kPa)

$p_v$  = Liquid vapor pressure at operating conditions (psia or kPa abs)

## Failure mode alarm

### HART analog

If self-diagnostics detect a gross flowmeter failure, the analog signal will be driven to the values below:

|            |       |
|------------|-------|
| Low        | 3.75  |
| High       | 21.75 |
| NAMUR Low  | 3.60  |
| NAMUR High | 22.6  |

High or low alarm signal is user-selectable through the fail mode alarm jumper on the electronics. NAMUR-compliant alarm limits are available through the C4 or CN Option. Alarm type is field configurable also.

### FOUNDATION fieldbus

The AI block allows the user to configure the alarm to HI-HI, HI, LO, or LO-LO with a variety of priority levels.

### Saturation output values

When the operating flow is outside the range points, the analog output continues to track the operating flow until reaching the saturation value listed below; the output does not exceed the listed saturation value regardless of the operating flow. The NAMUR-Compliant Saturation Values are available through the C4 or CN option. Saturation type is field configurable.

|            |      |
|------------|------|
| Low        | 3.9  |
| High       | 20.8 |
| NAMUR Low  | 3.8  |
| NAMUR High | 20.5 |

### Damping

Flow Damping adjustable between 0.2 and 255 seconds.

Process Temperature Damping adjustable between 0.4 and 32.0 seconds (MTA Option Only).

### Response time

Three vortex shedding cycles or 300 ms, whichever is greater, maximum required to reach 63.2% of actual input with the minimum damping (0.2 seconds).

### Turn-on time

#### HART analog

Less than four (4) seconds plus the response time to rated accuracy from power up (less than 7 seconds with the MTA Option).

#### FOUNDATION fieldbus

Performance within specifications no greater than 10.0 seconds after power is applied.

### Transient protection

The optional transient terminal block prevents damage to the flowmeter from transients induced by lightning, welding, heavy electrical equipment, or switch gears. The transient protection electronics are located in the terminal block.

The transient terminal block meets the following specifications:

IEEE C62.41 - 2002 Category B  
 3 kA crest (8 3 20  $\mu$ s)  
 6 kV crest (1.2 3 50  $\mu$ s)  
 6 kV/0.5 kA (0.5  $\mu$ s, 100 kHz, ring wave)

### Security lockout

When the security lockout jumper is enabled, the electronics will not allow you to modify parameters that affect flowmeter output.

### Output testing

#### Current source

Flowmeter may be commanded to set the current to a specified value between 4 and 20 mA.

#### Frequency source

Flowmeter may be commanded to set the frequency to a specified value between 0 and 10000 Hz.

#### Low flow cutoff

Adjustable over entire flow range. Below selected value, output is driven to 4 mA and zero pulse output frequency.

#### Humidity limits

Operates in 0–95% relative humidity under noncondensing conditions (tested to IEC 60770, Section 6.2.11).

### Overrange capability

#### HART analog

Analog signal output continues to 105 percent of span, then remains constant with increasing flow. The digital and pulse outputs will continue to indicate flow up to the upper sensor limit of the flowmeter and a maximum pulse output frequency of 10400 Hz.

#### FOUNDATION fieldbus

For liquid process fluid type, the transducer block digital output will continue to a nominal value of 25 ft/s. After that, the status associated with the transducer block output will go to UNCERTAIN. Above a nominal value of 30 ft/s, the status will go to BAD.

For gas/steam service, the transducer block digital output will continue to a nominal value of 220 ft/s for 0.5 and 1.0-in. line sizes and a nominal value of 250 ft/s for 1.5–12-in. line sizes. After that, the status associated with the transducer block output will go to UNCERTAIN. Above a nominal value of 300 ft/s for all line sizes, the status will go to BAD.

#### Flow calibration

Meter bodies are flow-calibrated and assigned a unique calibration factor (K-factor) at the factory. The calibration factor is entered into the electronics, enabling interchangeability of electronics and/or sensors without calculations or compromise in accuracy of the calibrated meter body.

**Status (FOUNDATION fieldbus only)**

If self-diagnostics detect a transmitter failure, the status of the measurement will inform the control system. Status may also set the PID output to a safe value.

**Schedule entries (FOUNDATION fieldbus only)**

Six (6)

**Links (FOUNDATION fieldbus only)**

Twelve (12)

**Virtual communications relationships (VCRs)  
(FOUNDATION fieldbus only)**

Maximum VCRs20

Number of Permanent Entries1

**Table 7. Block Information**

| Block                                      | Base index | Execution time (milliseconds) |
|--|------------|-------------------------------|
| Resource (RB)                              | 1000       | N/A                           |
| Transducer (TB)                            | 1200       | N/A                           |
| Analog Input 1 (AI 1)                      | 1400       | 15                            |
| Analog Input 2 (AI 2)                      | 1600       | 15                            |
| Proportional/<br>Integral/Derivative (PID) | 1800       | 20                            |
| Integrator (INTEG)                         | 2000       | 25                            |
| Arithmetic (ARITH)                         | 2200       | 20                            |
| Analog Input 3 (AI 3)                      | 2400       | 15                            |
| Analog Input 4 (AI 4)                      | 2600       | 15                            |
| Analog Input 5 (AI 5)                      | 2800       | 15                            |

## Typical Flow Ranges

Table 8 - Table 19 show typical flow ranges for some common process fluids with default filter settings. Consult your local sales representative to obtain a computer sizing program that describes in greater detail the flow range for an application.

**Table 8. Typical Pipe Velocity Ranges for 8800D and 8800DR<sup>(1)</sup>**

| Process line size<br>(inches/ DN) | Vortex meter <sup>(2)</sup> | Liquid velocity ranges |             | Gas velocity ranges |              |
|-----------------------------------|-----------------------------|------------------------|-------------|---------------------|--------------|
|                                   |                             | (ft/s)                 | (m/s)       | (ft/s)              | (m/s)        |
| 0.5/ 15                           | 8800DF005                   | 0.70 to 25.0           | 0.21 to 7.6 | 6.50 to 250.0       | 1.98 to 76.2 |
| 1/ 25                             | 8800DF010                   | 0.70 to 25.0           | 0.21 to 7.6 | 6.50 to 250.0       | 1.98 to 76.2 |
|                                   | 8800DR010                   | 0.25 to 8.8            | 0.08 to 2.7 | 2.29 to 87.9        | 0.70 to 26.8 |
| 1.5/ 40                           | 8800DF015                   | 0.70 to 25.0           | 0.21 to 7.6 | 6.50 to 250.0       | 1.98 to 76.2 |
|                                   | 8800DR015                   | 0.30 to 10.6           | 0.09 to 3.2 | 2.76 to 106.1       | 0.84 to 32.3 |
| 2/ 50                             | 8800DF020                   | 0.70 to 25.0           | 0.21 to 7.6 | 6.50 to 250.0       | 1.98 to 76.2 |
|                                   | 8800DR020                   | 0.42 to 15.2           | 0.13 to 4.6 | 3.94 to 151.7       | 1.20 to 46.2 |
| 3/ 80                             | 8800DF030                   | 0.70 to 25.0           | 0.21 to 7.6 | 6.50 to 250.0       | 1.98 to 76.2 |
|                                   | 8800DR030                   | 0.32 to 11.3           | 0.10 to 3.5 | 2.95 to 113.5       | 0.90 to 34.6 |
| 4/ 100                            | 8800DF040                   | 0.70 to 25.0           | 0.21 to 7.6 | 6.50 to 250.0       | 1.98 to 76.2 |
|                                   | 8800DR040                   | 0.41 to 14.5           | 0.12 to 4.4 | 3.77 to 145.2       | 1.15 to 44.3 |
| 6/ 150                            | 8800DF060                   | 0.70 to 25.0           | 0.21 to 7.6 | 6.50 to 250.0       | 1.98 to 76.2 |
|                                   | 8800DR060                   | 0.31 to 11.0           | 0.09 to 3.4 | 2.86 to 110.2       | 0.87 to 33.6 |
| 8/ 200                            | 8800DF080                   | 0.70 to 25.0           | 0.21 to 7.6 | 6.50 to 250.0       | 1.98 to 76.2 |
|                                   | 8800DR080                   | 0.40 to 14.4           | 0.12 to 4.4 | 3.75 to 144.4       | 1.14 to 44.0 |
| 10/ 250                           | 8800DF100                   | 0.90 to 25.0           | 0.27 to 7.6 | 6.50 to 250.0       | 1.98 to 76.2 |
|                                   | 8800DR100                   | 0.44 to 15.9           | 0.13 to 4.8 | 4.12 to 158.6       | 1.26 to 48.3 |
| 12/ 300                           | 8800DF120                   | 1.10 to 25.0           | 0.34 to 7.6 | 6.50 to 250.0       | 1.98 to 76.2 |
|                                   | 8800DR120                   | 0.63 to 17.6           | 0.19 to 5.4 | 4.58 to 176.1       | 1.40 to 53.7 |

(1) Table 8 is a reference of pipe velocities that can be measured for the standard Rosemount 8800D and the reducer Rosemount 8800DR Vortex Meters. It does not consider density limitations, as described in tables 2 and 3. Velocities are referenced in schedule 40 pipe.

(2) Velocity range of the Rosemount 8800DW is the same as Rosemount 8800DF.

**Table 9. Water Flow Rate Limits for the Rosemount 8800D and 8800DR<sup>(1)</sup>**

| Process line size<br>(inches/ DN) | Vortex meter <sup>(2)</sup> | Minimum and maximum measurable water flow rates * |                   |
|-----------------------------------|-----------------------------|---|-------------------|
|                                   |                             | Gallons/minute                                    | Cubic meters/hour |
| 0.5/ 15                           | 8800DF005                   | 1.76 to 23.7                                      | 0.40 to 5.4       |
| 1/ 25                             | 8800DF010                   | 2.96 to 67.3                                      | 0.67 to 15.3      |
| 1.5/ 40                           | 8800DR010                   | 1.76 to 23.7                                      | 0.40 to 5.4       |
|                                   | 8800DF015                   | 4.83 to 158                                       | 1.10 to 35.9      |
| 2/ 50                             | 8800DR015                   | 2.96 to 67.3                                      | 0.67 to 15.3      |
|                                   | 8800DF020                   | 7.96 to 261                                       | 1.81 to 59.4      |
| 3/ 80                             | 8800DR020                   | 4.83 to 158.0                                     | 1.10 to 35.9      |
|                                   | 8800DF030                   | 17.5 to 576                                       | 4.00 to 130       |
| 4/ 100                            | 8800DR030                   | 7.96 to 261.0                                     | 1.81 to 59.3      |
|                                   | 8800DF040                   | 30.2 to 992                                       | 6.86 to 225       |
| 6/ 150                            | 8800DR040                   | 17.5 to 576                                       | 4.00 to 130       |
|                                   | 8800DF060                   | 68.5 to 2251                                      | 15.6 to 511       |
| 8/ 200                            | 8800DR060                   | 30.2 to 992                                       | 6.86 to 225       |
|                                   | 8800DF080                   | 119 to 3898                                       | 27.0 to 885       |
| 10/ 250                           | 8800DR080                   | 68.5 to 2251                                      | 15.6 to 511       |
|                                   | 8800DF100                   | 231 to 6144                                       | 52.2 to 1395      |
| 12/ 300                           | 8800DR100                   | 119 to 3898                                       | 27.0 to 885       |
|                                   | 8800DF120                   | 391 to 8813                                       | 88.8 to 2002      |
|                                   | 8800DR120                   | 231 to 6144                                       | 52.2 to 1395      |

**\* Conditions: 77 °F (25 °C) and 14.7 psia (1.01 bar absolute)**

- (1) Table 9 is a reference of flow rates that can be measured for the standard Rosemount 8800D and the reducer 8800DR Vortex Meters. It does not consider density limitations, as described in tables 2 and 3.
- (2) Velocity range of the 8800DW is the same as 8800DF.

**Table 10. Air Flow Rate Limits at 59 °F (15 °C)**

| Process pressure         | Flow rate limits | Minimum and Maximum air flow rates for line sizes 1/2-in./DN 15 through 1-in./DN 25 |      |                  |               |                 |      |                  |      |
|--------------------------|------------------|---|------|------------------|---------------|-----------------|------|------------------|------|
|                          |                  | 1/2-in./DN 15   |      |                  |               | 1-in./DN 25     |      |                  |      |
|                          |                  | Rosemount 8800D   |      | Rosemount 8800DR |               | Rosemount 8800D |      | Rosemount 8800DR |      |
|                          |                  | ACFM  | ACMH | ACFM             | ACMH          | ACFM            | ACMH | ACFM             | ACMH |
| 0 psig<br>(0 bar G)      | max              | 27.9  | 47.3 | Not Available    | Not Available | 79.2            | 134  | 27.9             | 47.3 |
|                          | min              | 4.62  | 7.84 | Available        | Available     | 9.71            | 16.5 | 4.62             | 7.84 |
| 50 psig<br>(3,45 bar G)  | max              | 27.9  | 47.3 | Not Available    | Not Available | 79.2            | 134  | 27.9             | 47.3 |
|                          | min              | 1.31  | 2.22 | Available        | Available     | 3.72            | 6.32 | 1.31             | 2.22 |
| 100 psig<br>(6,89 bar G) | max              | 27.9  | 47.3 | Not Available    | Not Available | 79.2            | 134  | 27.9             | 47.3 |
|                          | min              | 0.98  | 1.66 | Available        | Available     | 2.80            | 4.75 | 0.98             | 1.66 |
| 150 psig<br>(10,3 bar G) | max              | 27.9  | 47.3 | Not Available    | Not Available | 79.2            | 134  | 27.9             | 47.3 |
|                          | min              | 0.82  | 1.41 | Available        | Available     | 2.34            | 3.98 | 0.82             | 1.41 |
| 200 psig<br>(13,8 bar G) | max              | 27.9  | 47.3 | Not Available    | Not Available | 79.2            | 134  | 27.9             | 47.3 |
|                          | min              | 0.82  | 1.41 | Available        | Available     | 2.34            | 3.98 | 0.82             | 1.41 |
| 300 psig<br>(20,7 bar G) | max              | 27.9  | 47.3 | Not Available    | Not Available | 79.2            | 134  | 27.9             | 47.3 |
|                          | min              | 0.82  | 1.41 | Available        | Available     | 2.34            | 3.98 | 0.82             | 1.41 |
| 400 psig<br>(27,6 bar G) | max              | 25.7  | 43.9 | Not Available    | Not Available | 73.0            | 124  | 25.7             | 43.9 |
|                          | min              | 0.82  | 1.41 | Available        | Available     | 2.34            | 3.98 | 0.82             | 1.41 |
| 500 psig<br>(34,5 bar G) | max              | 23.0  | 39.4 | Not Available    | Not Available | 66.0            | 112  | 23.0             | 39.4 |
|                          | min              | 0.82  | 1.41 | Available        | Available     | 2.34            | 3.98 | 0.82             | 1.41 |

Table 11. Air Flow Rate Limits at 59 °F (15 °C)

| Process pressure         | Flow rate limits | Minimum and maximum air Flow rates for line sizes 1½-in./DN 40 through 2-in./DN 50 |      |                  |      |                 |      |                  |      |
|--------------------------|------------------|--|------|------------------|------|-----------------|------|------------------|------|
|                          |                  | 1½-in./DN 40   |      |                  |      | 2-in./DN 50     |      |                  |      |
|                          |                  | Rosemount 8800D  |      | Rosemount 8800DR |      | Rosemount 8800D |      | Rosemount 8800DR |      |
|                          |                  | ACFM   | ACMH | ACFM             | ACMH | ACFM            | ACMH | ACFM             | ACMH |
| 0 psig<br>(0 bar G)      | max              | 212  | 360  | 79.2             | 134  | 349             | 593  | 212              | 360  |
|                          | min              | 18.4   | 31.2 | 9.71             | 16.5 | 30.3            | 51.5 | 18.4             | 31.2 |
| 50 psig<br>(3,45 bar G)  | max              | 212  | 360  | 79.2             | 134  | 349             | 593  | 212              | 360  |
|                          | min              | 8.76   | 14.9 | 3.72             | 6.32 | 14.5            | 24.6 | 8.76             | 14.9 |
| 100 psig<br>(6,89 bar G) | max              | 212  | 360  | 79.2             | 134  | 349             | 593  | 212              | 360  |
|                          | min              | 6.58   | 11.2 | 2.80             | 4.75 | 10.8            | 18.3 | 6.58             | 11.2 |
| 150 psig<br>(10,3 bar G) | max              | 212  | 360  | 79.2             | 134  | 349             | 593  | 212              | 360  |
|                          | min              | 5.51   | 9.36 | 2.34             | 3.98 | 9.09            | 15.4 | 5.51             | 9.36 |
| 200 psig<br>(13,8 bar G) | max              | 212  | 360  | 79.2             | 134  | 349             | 593  | 212              | 360  |
|                          | min              | 5.51   | 9.36 | 2.34             | 3.98 | 9.09            | 15.4 | 5.51             | 9.36 |
| 300 psig<br>(20,7 bar G) | max              | 198  | 337  | 79.2             | 134  | 326             | 554  | 198              | 337  |
|                          | min              | 5.51   | 9.36 | 2.34             | 3.98 | 9.09            | 15.4 | 5.51             | 9.36 |
| 400 psig<br>(27,6 bar G) | max              | 172  | 293  | 73.0             | 124  | 284             | 483  | 172              | 293  |
|                          | min              | 5.51   | 9.36 | 2.34             | 3.98 | 9.09            | 15.4 | 5.51             | 9.36 |
| 500 psig<br>(34,5 bar G) | max              | 154  | 262  | 66.0             | 112  | 254             | 432  | 154              | 262  |
|                          | min              | 5.51   | 9.36 | 2.34             | 3.98 | 9.09            | 15.4 | 5.51             | 9.36 |

Table 12. Air Flow Rate Limits at 59 °F (15 °C)

| Process pressure         | Flow rate limits | Minimum and maximum air flow rates for line sizes 3-in./DN 80 through 4-in./DN 100 |      |                  |      |                 |      |                  |      |
|--------------------------|------------------|--|------|------------------|------|-----------------|------|------------------|------|
|                          |                  | 3-in./DN 80  |      |                  |      | 4-in./DN 100    |      |                  |      |
|                          |                  | Rosemount 8800D  |      | Rosemount 8800DR |      | Rosemount 8800D |      | Rosemount 8800DR |      |
|                          |                  | ACFM   | ACMH | ACFM             | ACMH | ACFM            | ACMH | ACFM             | ACMH |
| 0 psig<br>(0 bar G)      | max              | 770  | 1308 | 349              | 593  | 1326            | 2253 | 770              | 1308 |
|                          | min              | 66.8   | 114  | 30.3             | 51.5 | 115             | 195  | 66.8             | 114  |
| 50 psig<br>(3,45 bar G)  | max              | 770  | 1308 | 349              | 593  | 1326            | 2253 | 770              | 1308 |
|                          | min              | 31.8   | 54.1 | 14.5             | 24.6 | 54.8            | 93.2 | 31.8             | 54.1 |
| 100 psig<br>(6,89 bar G) | max              | 770  | 1308 | 349              | 593  | 1326            | 2253 | 770              | 1308 |
|                          | min              | 23.9   | 40.6 | 10.8             | 18.3 | 41.1            | 69.8 | 23.9             | 40.6 |
| 150 psig<br>(10,3 bar G) | max              | 770  | 1308 | 349              | 593  | 1326            | 2253 | 770              | 1308 |
|                          | min              | 20.0   | 34.0 | 9.09             | 15.4 | 34.5            | 58.6 | 20.0             | 34.0 |
| 200 psig<br>(13,8 bar G) | max              | 770  | 1308 | 349              | 593  | 1326            | 2253 | 770              | 1308 |
|                          | min              | 20.0   | 34.0 | 9.09             | 15.4 | 34.5            | 58.6 | 20.0             | 34.0 |
| 300 psig<br>(20,7 bar G) | max              | 718  | 1220 | 326              | 554  | 1237            | 2102 | 718              | 1220 |
|                          | min              | 20.0   | 34.0 | 9.09             | 15.4 | 34.5            | 58.6 | 20.0             | 34.0 |
| 400 psig<br>(27,6 bar G) | max              | 625  | 1062 | 284              | 483  | 1076            | 1828 | 625              | 1062 |
|                          | min              | 20.0   | 34.0 | 9.09             | 15.4 | 34.5            | 58.6 | 20.0             | 34.0 |
| 500 psig<br>(34,5 bar G) | max              | 560  | 951  | 254              | 432  | 964             | 1638 | 560              | 951  |
|                          | min              | 20.0   | 34.0 | 9.09             | 15.4 | 34.5            | 58.6 | 20.0             | 34.0 |

**Table 13. Air Flow Rate Limits at 59 °F (15 °C)**

| Process pressure         | Flow rate limits | Minimum and maximum air flow rates for line sizes 6-in./DN 150 through 8-in./DN 200 |      |                  |      |                 |      |                  |      |
|--------------------------|------------------|---|------|------------------|------|-----------------|------|------------------|------|
|                          |                  | 6-in./DN 150  |      |                  |      | 8-in./DN 200    |      |                  |      |
|                          |                  | Rosemount 8800D   |      | Rosemount 8800DR |      | Rosemount 8800D |      | Rosemount 8800DR |      |
|                          |                  | ACFM  | ACMH | ACFM             | ACMH | ACFM            | ACMH | ACFM             | ACMH |
| 0 psig<br>(0 bar G)      | max              | 3009  | 5112 | 1326             | 2253 | 5211            | 8853 | 3009             | 5112 |
|                          | min              | 261   | 443  | 115              | 195  | 452             | 768  | 261              | 443  |
| 50 psig<br>(3,45 bar G)  | max              | 3009  | 5112 | 1326             | 2253 | 5211            | 8853 | 3009             | 5112 |
|                          | min              | 124   | 211  | 54.8             | 93.2 | 215             | 365  | 124              | 211  |
| 100 psig<br>(6,89 bar G) | max              | 3009  | 5112 | 1326             | 2253 | 5211            | 8853 | 3009             | 5112 |
|                          | min              | 93.3  | 159  | 41.1             | 69.8 | 162             | 276  | 93.3             | 159  |
| 150 psig<br>(10,3 bar G) | max              | 3009  | 5112 | 1326             | 2253 | 5211            | 8853 | 3009             | 5112 |
|                          | min              | 78.2  | 133  | 34.5             | 58.6 | 135             | 229  | 78.2             | 133  |
| 200 psig<br>(13,8 bar G) | max              | 3009  | 5112 | 1326             | 2253 | 5211            | 8853 | 3009             | 5112 |
|                          | min              | 78.2  | 133  | 34.5             | 58.6 | 135             | 229  | 78.2             | 133  |
| 300 psig<br>(20,7 bar G) | max              | 2807  | 4769 | 1237             | 2102 | 4862            | 8260 | 2807             | 4769 |
|                          | min              | 78.2  | 133  | 34.5             | 58.6 | 135             | 229  | 78.2             | 133  |
| 400 psig<br>(27,6 bar G) | max              | 2442  | 4149 | 1076             | 1828 | 4228            | 7183 | 2442             | 4149 |
|                          | min              | 78.2  | 133  | 34.5             | 58.6 | 136             | 229  | 78.2             | 133  |
| 500 psig<br>(34,5 bar G) | max              | 2188  | 3717 | 964              | 1638 | 3789            | 6437 | 2188             | 3717 |
|                          | min              | 78.2  | 133  | 34.5             | 58.6 | 136             | 229  | 78.2             | 133  |

**Table 14. Air Flow Rate Limits at 59 °F (15 °C)**

| Process pressure         | Flow rate limits | Minimum and maximum air flow rates for line sizes 10-in./DN 250 through 12-in./DN 300 |       |                  |      |                 |       |                  |       |
|--------------------------|------------------|---|-------|------------------|------|-----------------|-------|------------------|-------|
|                          |                  | 10-in./DN 250   |       |                  |      | 12-in./DN 300   |       |                  |       |
|                          |                  | Rosemount 8800D   |       | Rosemount 8800DR |      | Rosemount 8800D |       | Rosemount 8800DR |       |
|                          |                  | ACFM  | ACMH  | ACFM             | ACMH | ACFM            | ACMH  | ACFM             | ACMH  |
| 0 psig<br>(0 bar G)      | max              | 8214  | 13956 | 5211             | 8853 | 11781           | 20016 | 8214             | 13956 |
|                          | min              | 712.9   | 1211  | 452              | 768  | 1022            | 1736  | 712.9            | 1211  |
| 50 psig<br>(3,45 bar G)  | max              | 8214  | 13956 | 5211             | 8853 | 11781           | 20016 | 8214             | 13956 |
|                          | min              | 339.5   | 577   | 215              | 365  | 486.9           | 827   | 339.5            | 577   |
| 100 psig<br>(6,89 bar G) | max              | 8214  | 13956 | 5211             | 8853 | 11781           | 20016 | 8214             | 13956 |
|                          | min              | 254.7   | 433   | 162              | 276  | 365.4           | 621   | 254.7            | 433   |
| 150 psig<br>(10,3 bar G) | max              | 8214  | 13956 | 5211             | 8853 | 11781           | 20016 | 8214             | 13956 |
|                          | min              | 213.6   | 363   | 135              | 229  | 306.3           | 520   | 213.6            | 363   |
| 200 psig<br>(13,8 bar G) | max              | 8214  | 13956 | 5211             | 8853 | 11781           | 20016 | 8214             | 13956 |
|                          | min              | 213.6   | 363   | 135              | 229  | 306.3           | 520   | 213.6            | 363   |
| 300 psig<br>(20,7 bar G) | max              | 7664  | 13021 | 4862             | 8260 | 10992           | 18675 | 7664             | 13021 |
|                          | min              | 213.6   | 363   | 135              | 229  | 306.3           | 520   | 213.6            | 363   |
| 400 psig<br>(27,6 bar G) | max              | 6664  | 11322 | 4228             | 7183 | 9559            | 16241 | 6664             | 11322 |
|                          | min              | 213.6   | 363   | 136              | 229  | 306.3           | 520   | 213.6            | 363   |
| 500 psig<br>(34,5 bar G) | max              | 5972  | 10146 | 3789             | 6437 | 8565            | 14552 | 5972             | 10146 |
|                          | min              | 213.6   | 363   | 136              | 229  | 306.3           | 520   | 213.6            | 363   |

**Note**

The Rosemount 8800D measures the volumetric flow under operating conditions (i.e. the actual volume at the operating pressure and temperature—acfm or acmh), as shown above. However, gas volumes are strongly dependent on pressure and temperature. Therefore, gas quantities are typically stated in standard or normal conditions (e.g. SCFM or NCMH). (Standard conditions are typically 59 °F and 14.7 psia. Normal conditions are typically 0 °C and 1.01 bar abs.) The flow rate limits in standard conditions are found using the equations below:

$$\text{Standard Flow Rate} = \text{Actual Flow Rate} \times \text{Density Ratio}$$

$$\text{Density Ratio} = \text{Density at Actual (Operating) Conditions} / \text{Density at Standard Conditions}$$



**Table 15. Saturated Steam Flow Rate Limits (assumes steam quality is 100%)**

| Process pressure         | Flow rate limits | Minimum and maximum saturated steam flow rates for line sizes 1/2-in./DN 15 through 1-in./DN 25 |       |                  |               |                 |       |                  |       |
|--------------------------|------------------|---|-------|------------------|---------------|-----------------|-------|------------------|-------|
|                          |                  | 1/2-in./DN 15   |       |                  |               | 1-in./DN 25     |       |                  |       |
|                          |                  | Rosemount 8800D   |       | Rosemount 8800DR |               | Rosemount 8800D |       | Rosemount 8800DR |       |
|                          |                  | lb/hr   | kg/hr | lb/hr            | kg/hr         | lb/hr           | kg/hr | lb/hr            | kg/hr |
| 15 psig<br>(1,03 bar G)  | max              | 120   | 54.6  | Not Available    | Not Available | 342             | 155   | 120              | 54.6  |
|                          | min              | 12.8  | 5.81  | Available        | Available     | 34.8            | 15.8  | 12.8             | 5.81  |
| 25 psig<br>(1,72 bar G)  | max              | 158   | 71.7  | Not Available    | Not Available | 449             | 203   | 158              | 71.7  |
|                          | min              | 14.0  | 6.35  | Available        | Available     | 39.9            | 18.1  | 14.0             | 6.35  |
| 50 psig<br>(3,45 bar G)  | max              | 250   | 113   | Not Available    | Not Available | 711             | 322   | 250              | 113   |
|                          | min              | 17.6  | 8.00  | Available        | Available     | 50.1            | 22.7  | 17.6             | 8.00  |
| 100 psig<br>(6,89 bar G) | max              | 429   | 194   | Not Available    | Not Available | 1221            | 554   | 429              | 194   |
|                          | min              | 23.1  | 10.5  | Available        | Available     | 65.7            | 29.8  | 23.1             | 10.5  |
| 150 psig<br>(10,3 bar G) | max              | 606   | 275   | Not Available    | Not Available | 1724            | 782   | 606              | 275   |
|                          | min              | 27.4  | 12.5  | Available        | Available     | 78.1            | 35.4  | 27.4             | 12.5  |
| 200 psig<br>(13,8 bar G) | max              | 782   | 354   | Not Available    | Not Available | 2225            | 1009  | 782              | 354   |
|                          | min              | 31.2  | 14.1  | Available        | Available     | 88.7            | 40.2  | 31.2             | 14.1  |
| 300 psig<br>(20,7 bar G) | max              | 1135  | 515   | Not Available    | Not Available | 3229            | 1464  | 1135             | 515   |
|                          | min              | 37.6  | 17.0  | Available        | Available     | 107             | 48.5  | 37.6             | 17.0  |
| 400 psig<br>(27,6 bar G) | max              | 1492  | 676   | Not Available    | Not Available | 4244            | 1925  | 1492             | 676   |
|                          | min              | 44.1  | 20.0  | Available        | Available     | 125             | 56.7  | 44.1             | 20.0  |
| 500 psig<br>(34,5 bar G) | max              | 1855  | 841   | Not Available    | Not Available | 5277            | 2393  | 1855             | 841   |
|                          | min              | 54.8  | 24.9  | Available        | Available     | 156             | 70.7  | 54.8             | 24.9  |

**Table 16. Saturated Steam Flow Rate Limits (assumes steam quality is 100%)**

| Process pressure         | Flow rate limits | Minimum and maximum saturated steam flow rates for line sizes 1 1/2-in./DN 40 through 2-in./DN 50 |       |                  |       |                 |       |                  |       |
|--------------------------|------------------|---|-------|------------------|-------|-----------------|-------|------------------|-------|
|                          |                  | 1 1/2-in./DN 40   |       |                  |       | 2-in./DN 50     |       |                  |       |
|                          |                  | Rosemount 8800D   |       | Rosemount 8800DR |       | Rosemount 8800D |       | Rosemount 8800DR |       |
|                          |                  | lb/hr   | kg/hr | lb/hr            | kg/hr | lb/hr           | kg/hr | lb/hr            | kg/hr |
| 15 psig<br>(1,03 bar G)  | max              | 917   | 416   | 342              | 155   | 1511            | 685   | 917              | 416   |
|                          | min              | 82.0  | 37.2  | 34.8             | 15.8  | 135             | 61.2  | 82.0             | 37.2  |
| 25 psig<br>(1,72 bar G)  | max              | 1204  | 546   | 449              | 203   | 1983            | 899   | 1204             | 546   |
|                          | min              | 93.9  | 42.6  | 39.9             | 18.1  | 155             | 70.2  | 93.9             | 42.6  |
| 50 psig<br>(3,45 bar G)  | max              | 1904  | 864   | 711              | 322   | 3138            | 1423  | 1904             | 864   |
|                          | min              | 118   | 53.4  | 50.1             | 22.7  | 195             | 88.3  | 118              | 53.4  |
| 100 psig<br>(6,89 bar G) | max              | 3270  | 1483  | 1221             | 554   | 5389            | 2444  | 3270             | 1483  |
|                          | min              | 155   | 70.1  | 65.7             | 29.8  | 255             | 116   | 155              | 70.1  |
| 150 psig<br>(10,3 bar G) | max              | 4616  | 2094  | 1724             | 782   | 7609            | 3451  | 4616             | 2094  |
|                          | min              | 184   | 83.2  | 78.1             | 35.4  | 303             | 137   | 184              | 83.2  |
| 200 psig<br>(13,8 bar G) | max              | 5956  | 2702  | 2225             | 1009  | 9818            | 4453  | 5956             | 2702  |
|                          | min              | 209   | 94.5  | 88.7             | 40.2  | 344             | 156   | 209              | 94.5  |
| 300 psig<br>(20,7 bar G) | max              | 8644  | 3921  | 3229             | 1464  | 14248           | 6463  | 8644             | 3921  |
|                          | min              | 252   | 114   | 107              | 48.5  | 415             | 189   | 252              | 114   |
| 400 psig<br>(27,6 bar G) | max              | 11362   | 5154  | 4244             | 1925  | 18727           | 8494  | 11362            | 5154  |
|                          | min              | 295   | 134   | 125              | 56.7  | 487             | 221   | 295              | 134   |
| 500 psig<br>(34,5 bar G) | max              | 14126   | 6407  | 5277             | 2393  | 23284           | 10561 | 14126            | 6407  |
|                          | min              | 367   | 167   | 156              | 70.7  | 605             | 274   | 367              | 167   |

**Table 17. Saturated Steam Flow Rate Limits (assumes steam quality is 100%)**

| Process pressure         | Flowrate limits | Minimum and maximum saturated steam flow rates for line sizes 3-in./DN 80 through 4-in./DN 100 |       |                  |       |                 |       |                  |       |
|--------------------------|-----------------|--|-------|------------------|-------|-----------------|-------|------------------|-------|
|                          |                 | 3-in./DN 80  |       |                  |       | 4-in./DN 100    |       |                  |       |
|                          |                 | Rosemount 8800D  |       | Rosemount 8800DR |       | Rosemount 8800D |       | Rosemount 8800DR |       |
|                          |                 | lb/hr  | kg/hr | lb/hr            | kg/hr | lb/hr           | kg/hr | lb/hr            | kg/hr |
| 15 psig<br>(1,03 bar G)  | max             | 3330   | 1510  | 1511             | 685   | 5734            | 2601  | 3330             | 1510  |
|                          | min             | 298  | 135   | 135              | 61.2  | 513             | 233   | 298              | 135   |
| 25 psig<br>(1,72 bar G)  | max             | 4370   | 1982  | 1983             | 899   | 7526            | 3414  | 4370             | 1982  |
|                          | min             | 341  | 155   | 155              | 70.2  | 587             | 267   | 341              | 155   |
| 50 psig<br>(3,45 bar G)  | max             | 6914   | 3136  | 3138             | 1423  | 11905           | 5400  | 6914             | 3136  |
|                          | min             | 429  | 195   | 195              | 88.3  | 739             | 335   | 429              | 195   |
| 100 psig<br>(6,89 bar G) | max             | 11874  | 5386  | 5389             | 2444  | 20448           | 9275  | 11874            | 5386  |
|                          | min             | 562  | 255   | 255              | 116   | 968             | 439   | 562              | 255   |
| 150 psig<br>(10,3 bar G) | max             | 16763  | 7603  | 7609             | 3451  | 28866           | 13093 | 16763            | 7603  |
|                          | min             | 668  | 303   | 303              | 137   | 1150            | 522   | 668              | 303   |
| 200 psig<br>(13,8 bar G) | max             | 21630  | 9811  | 9818             | 4453  | 37247           | 16895 | 21630            | 9811  |
|                          | min             | 759  | 344   | 344              | 156   | 1307            | 593   | 759              | 344   |
| 300 psig<br>(20,7 bar G) | max             | 31389  | 14237 | 14248            | 6463  | 54052           | 24517 | 31389            | 14237 |
|                          | min             | 914  | 415   | 415              | 189   | 1574            | 714   | 914              | 415   |
| 400 psig<br>(27,6 bar G) | max             | 41258  | 18714 | 18727            | 8494  | 71047           | 32226 | 41258            | 18714 |
|                          | min             | 1073   | 487   | 487              | 221   | 1847            | 838   | 1073             | 487   |
| 500 psig<br>(34,5 bar G) | max             | 51297  | 23267 | 23284            | 10561 | 88334           | 40068 | 51297            | 23267 |
|                          | min             | 1334   | 605   | 605              | 274   | 2297            | 1042  | 1334             | 605   |

**Table 18. Saturated Steam Flow Rate Limits (assumes steam quality is 100%)**

| Process pressure         | Flowrate limits | Minimum and maximum saturated steam flow rates for line sizes 6-in./DN 150 through 8-in./DN 200 |       |                  |       |                 |        |                  |       |
|--------------------------|-----------------|---|-------|------------------|-------|-----------------|--------|------------------|-------|
|                          |                 | 6-in./DN 150  |       |                  |       | 8-in./DN 200    |        |                  |       |
|                          |                 | Rosemount 8800D   |       | Rosemount 8800DR |       | Rosemount 8800D |        | Rosemount 8800DR |       |
|                          |                 | lb/hr   | kg/hr | lb/hr            | kg/hr | lb/hr           | kg/hr  | lb/hr            | kg/hr |
| 15 psig<br>(1,03 bar G)  | max             | 13013   | 5903  | 5734             | 2601  | 22534           | 10221  | 13013            | 5903  |
|                          | min             | 1163  | 528   | 513              | 233   | 2015            | 914    | 1163             | 528   |
| 25 psig<br>(1,72 bar G)  | max             | 17080   | 7747  | 7526             | 3414  | 29575           | 13415  | 17080            | 7747  |
|                          | min             | 1333  | 605   | 587              | 267   | 2308            | 1047   | 1333             | 605   |
| 50 psig<br>(3,45 bar G)  | max             | 27019   | 12255 | 11905            | 5400  | 46787           | 21222  | 27019            | 12255 |
|                          | min             | 1676  | 760   | 739              | 335   | 2903            | 1317   | 1676             | 760   |
| 100 psig<br>(6,89 bar G) | max             | 46405   | 21049 | 20448            | 9275  | 80356           | 36449  | 46405            | 21049 |
|                          | min             | 2197  | 996   | 968              | 439   | 3804            | 1725   | 2197             | 996   |
| 150 psig<br>(10,3 bar G) | max             | 65611   | 29761 | 28866            | 13093 | 113440          | 51455  | 65611            | 29761 |
|                          | min             | 2610  | 1184  | 1150             | 522   | 4520            | 2050   | 2610             | 1184  |
| 200 psig<br>(13,8 bar G) | max             | 84530   | 38342 | 37247            | 16895 | 146375          | 66395  | 84530            | 38342 |
|                          | min             | 2965  | 1345  | 1307             | 593   | 5134            | 2329   | 2965             | 1345  |
| 300 psig<br>(20,7 bar G) | max             | 122666  | 55640 | 54052            | 24517 | 212411          | 96348  | 122666           | 55640 |
|                          | min             | 3572  | 1620  | 1574             | 714   | 6185            | 2805   | 3572             | 1620  |
| 400 psig<br>(27,6 bar G) | max             | 161236  | 73135 | 71047            | 32226 | 279200          | 126643 | 161236           | 73135 |
|                          | min             | 4192  | 1901  | 1847             | 838   | 7259            | 3293   | 4192             | 1901  |
| 500 psig<br>(34,5 bar G) | max             | 200468  | 90931 | 88334            | 40068 | 347134          | 157457 | 200468           | 90931 |
|                          | min             | 5212  | 2364  | 2297             | 1042  | 9025            | 4094   | 5212             | 2364  |

**Table 19. Saturated Steam Flow Rate Limits (assumes steam quality is 100%)**

| Process pressure         | Flow rate limits | Minimum and maximum saturated steam flow rates for line sizes 10-in./DN 250 through 12-in./DN 300 |        |                  |        |                 |        |                  |        |
|--------------------------|------------------|---|--------|------------------|--------|-----------------|--------|------------------|--------|
|                          |                  | 10-in./DN 250   |        |                  |        | 12-in./DN 300   |        |                  |        |
|                          |                  | Rosemount 8800D   |        | Rosemount 8800DR |        | Rosemount 8800D |        | Rosemount 8800DR |        |
|                          |                  | lb/hr   | kg/hr  | lb/hr            | kg/hr  | lb/hr           | kg/hr  | lb/hr            | kg/hr  |
| 15 psig<br>(1,03 bar G)  | max              | 35519   | 16111  | 22534            | 10221  | 50994           | 23130  | 35519            | 16111  |
|                          | min              | 3175  | 1440   | 2015             | 914    | 4554            | 2066   | 3175             | 1440   |
| 25 psig<br>(1,72 bar G)  | max              | 46618   | 21146  | 29575            | 13415  | 66862           | 30328  | 46618            | 21146  |
|                          | min              | 4570  | 2073   | 2308             | 1047   | 5218            | 2367   | 4570             | 2073   |
| 50 psig<br>(3,45 bar G)  | max              | 73748   | 33452  | 46787            | 21222  | 105774          | 47978  | 73748            | 33452  |
|                          | min              | 4575  | 2075   | 2903             | 1317   | 6562            | 2976   | 4575             | 2075   |
| 100 psig<br>(6,89 bar G) | max              | 126660  | 57452  | 80356            | 36449  | 181663          | 82401  | 126660           | 57452  |
|                          | min              | 5996  | 2720   | 3804             | 1725   | 8600            | 3901   | 5996             | 2720   |
| 150 psig<br>(10,3 bar G) | max              | 178808  | 81106  | 113440           | 51455  | 256457          | 116327 | 178808           | 81106  |
|                          | min              | 7125  | 3232   | 4520             | 2050   | 10218           | 4635   | 7125             | 3232   |
| 200 psig<br>(13,8 bar G) | max              | 230722  | 104654 | 146375           | 66395  | 330915          | 150101 | 230722           | 104654 |
|                          | min              | 8092  | 3670   | 5134             | 2329   | 11607           | 5265   | 8092             | 3670   |
| 300 psig<br>(20,7 bar G) | max              | 334810  | 151867 | 212411           | 96348  | 480203          | 217816 | 334810           | 151867 |
|                          | min              | 9749  | 4422   | 6185             | 2805   | 13983           | 6343   | 9749             | 4422   |
| 400 psig<br>(27,6 bar G) | max              | 440085  | 199619 | 279200           | 126643 | 631195          | 286305 | 440085           | 199619 |
|                          | min              | 11442   | 5190   | 7259             | 3293   | 16411           | 7444   | 11442            | 5190   |
| 500 psig<br>(34,5 bar G) | max              | 547165  | 248190 | 347134           | 157457 | 784775          | 355968 | 547165           | 248190 |
|                          | min              | 14226   | 6453   | 9025             | 4094   | 20404           | 9255   | 14226            | 6453   |

## Performance specifications

The following performance specifications are for all Rosemount models except where noted. Digital performance specifications applicable to both Digital HART and FOUNDATION fieldbus output.

### Flow accuracy

Includes linearity, hysteresis, and repeatability.

### Liquids - for Reynolds numbers over 20000

#### Digital and pulse output

±0.65% of rate

#### Note

The accuracy for the 8800DR, line sizes 6-in. to 12-in. (150 to 300mm), is ±1.0% of rate.

### Analog output

Same as pulse output plus an additional 0.025% of span

### Gas and steam - for Reynolds numbers over 15,000

#### Digital and pulse output

±1.0% of rate

Note: The accuracy for the 8800DR, line sizes 6 to 12-in. (150 to 300mm), is ±1.35% of rate.

### Analog output

Same as pulse output plus an additional 0.025% of span

### Accuracy limitations for gas and steam:

For 1/2 and 1-in. (DN 15 and DN 25): max velocity of 220 ft/s (67.06 m/s)

For 1/2 to 4-in. (DN 15 to DN 200) Dual-style meters: max velocity of 100 ft/s (30.5 m/s)

#### Note

As the meter Reynolds Numbers decreases below the stated limit to 10,000 the accuracy error band will increase linearly to +/-2.0%. For Reynolds Numbers down to 5,000 the accuracy error band will increase linearly from +/-2.0% to +/-6.0%.

### Process temperature accuracy

2.2 °F (1.2 °C) or 0.4% of reading (in °C), whichever is greater.

#### Note

For remote mount installations, add ±0.018 °F/ft. (±0.03 °C/m) of uncertainty to the temperature measurement.

### Mass flow accuracy for temperature compensated mass flow

± 2.0% of rate (Typical)

### Repeatability

± 0.1% of actual flow rate

## Stability

± 0.1% of rate over one year

### Process temperature effect

Automatic K-factor correction with user-entered process temperature.

Table 20 indicates the percent change in K-factor per 100 °F (55.6 °C) in process temperature from reference temperature of 77 °F (25 °C).

**Table 20. Process Temperature Effect**

| Material                       | Percent change in K-factor per 100 °F (55.6 °C) |
|--------------------------------|---|
| 316L @ < 77 °F (25 °C)         | + 0.23  |
| 316L @ > 77 °F (25 °C)         | - 0.27  |
| Nickel Alloy C < 77 °F (25 °C) | + 0.22  |
| Nickel Alloy C > 77 °F (25 °C) | - 0.22  |

### Ambient temperature effect

#### Digital and pulse outputs

No effect

#### Analog output

±0.1% of span from -58 to 185 °F (-50 to 85 °C)

### Vibration effect

An output with no process flow may be detected if sufficiently high vibration is present.

The meter design will minimize this effect, and the factory settings for signal processing are selected to eliminate these errors for most applications.

If an output error at zero flow is still detected, it can be eliminated by adjusting the low flow cutoff, trigger level, or low-pass filter.

As the process begins to flow through the meter, most vibration effects are quickly overcome by the flow signal.

### Vibration specifications

#### Integral aluminum housings, remote aluminum housings, and remote SST housings

At or near the minimum liquid flow rate in a normal pipe mounted installation, the maximum vibration should be 0.087-in. (2,21 mm) double amplitude displacement or 1 g acceleration, whichever is smaller. At or near the minimum gas flow rate in a normal pipe mounted installation, the maximum vibration should be 0.043-in. (1,09 mm) double amplitude displacement or 1/2 g acceleration, whichever is smaller.

#### Integral SST housing

At or near the minimum liquid flow rate in a normal pipe mounted installation, the maximum vibration should be 0.044-in. (1,11 mm) double amplitude displacement or 1/3 g acceleration, whichever is smaller. At or near the minimum gas flow rate in a normal pipe mounted installation, the maximum vibration should be 0.022-in. (0,55 mm) double amplitude displacement or 1/6 g acceleration, whichever is smaller.

**Mounting position effect**

Meter will meet accuracy specifications when mounted in horizontal, vertical, or inclined pipelines. Best practice for mounting in a horizontal pipe is to orient the shedder bar in the horizontal plane. This will prevent solids in liquid applications and liquid in gas/steam applications from disrupting the shedding frequency.

**EMI/RFI effect**

Meets EMC requirements to EU Directive 2004/108/EC.

**HART analog**

Output error less than  $\pm 0.025\%$  of span with twisted pair from 80-1000 MHz for radiated field strength of 10 V/m; 1.4 - 2.0 GHz for radiated field strength of 3 V/m; 2.0 - 2.7 GHz for radiated field strength of 1 V/m. Tested per EN61326.

**FOUNDATION fieldbus and digital HART**

No effect on the values that are being given if using HART digital signal or FOUNDATION fieldbus. Tested per EN 61326.

**Magnetic-field interference****HART analog**

Output error less than  $\pm 0.025\%$  of span at 30 A/m (rms). Tested per EN 61326.

**FOUNDATION fieldbus**

No effect on digital output accuracy at 30 A/m (rms). Tested per EN 61326.

**Series mode noise rejection****HART analog**

Output error less than  $\pm 0.025\%$  of span at 1 V rms, 60 Hz.

**FOUNDATION fieldbus**

No effect on digital output accuracy at 1 V rms, 60 Hz.

**Common mode noise rejection****HART analog**

Output error less than  $\pm 0.025\%$  of span at 30 V rms, 60 Hz.

**FOUNDATION fieldbus**

No effect on digital output accuracy at 250 V rms, 60 Hz.

**Power supply effect****HART analog**

Less than 0.005% of span per volt

**FOUNDATION fieldbus**

No effect on accuracy.

**Physical specifications****NACE compliance**

Materials of Construction meet NACE material recommendations per MR0175/ISO15156 for use in H<sub>2</sub>S containing environments in oil field production. Materials of construction also meet NACE recommendations per MR0103-2003 for corrosive petroleum refining environments. MR0103 compliance requires Q25 option in model code.

**Note**

Certificate of compliance for MR0175/ISO15156 requires Q15 as a separate line item.

**Electrical connections**

$1/2$  - 14 or M20 3 1.5 conduit threads; screw terminals provided for 4-20 mA, FOUNDATION Fieldbus, and pulse output connections; communicator connections permanently fixed to terminal block.

**Non-wetted materials****Housing**

Low-copper aluminum (FM Type 4X, CSA Type 4X, IP66)  
Optional SST housing

**Paint**

Polyurethane

**Cover O-rings**

Buna-N

**Flanges**

316/316L lap joint

**Temperature sensor (MTA option)**

Type-N Thermocouple

**Process-wetted materials****Meter body**

CF-3M cast stainless, N06022 wrought Nickel Alloy and CW2M cast Nickel Alloy. Also available in WCB and LCC cast carbon steel and 6A duplex stainless steel.

**Flanges**

316/316L stainless steel  
Nickel Alloy N06022 Weld Neck  
A105 forged carbon steel  
LF2 forged carbon steel  
UNS S32760 wrought duplex stainless steel

**Collars**

Nickel Alloy N06022  
316/316L Stainless Steel

**Surface finish of flanges and collars**

Standard: To the requirements of the applicable flange standard.  
Smooth: 63 to 125  $\mu$  inches  
(1.6 to 3.1  $\mu$  meters) Ra roughness

**Process connections**

Mounts between the following flange configurations:  
 ASME B16.5: Class 150, 300, 600, 900, 1500  
 EN 1092-1: PN 10, 16, 25, 40, 64, 100, 160  
 JIS B2220: 10K, 20K, and 40K  
 Weld-end: Schedule 10, Schedule 40, Schedule 80, Schedule 160

**Mounting**

**Integral (standard)**

Electronics are mounted on meter body.

**Remote (optional)**

Electronics may be mounted remote from the meter body. Interconnecting coaxial cable available in nonadjustable 10, 20, 30, 33, and 50 ft (3,0, 6,1, 9,1, 10, and 15,2 m) lengths. Consult factory for non-standard lengths up to 75 ft (22,9 m). Remote mounting hardware includes a pipe mount bracket with one u-bolt. Armored remote cables are also available in lengths of 10, 20, 33, 50 and 75 feet. The armored remote option comes standard with an aluminum gland to connect the cable to the meter and electronics. A stainless steel gland is provided when ordered in conjunction with a stainless steel electronics housing.

**Temperature limitations for integral mounting**

The maximum process temperature for integral mount electronics is dependent on the ambient temperature where the meter is installed. The electronics must not exceed 185 °F (85 °C). The following is for reference, please note that the pipe was insulated with 3 inches of ceramic fiber insulator.

**Pipe length requirements**

The vortex meter may be installed with a minimum of ten diameters (D) of straight pipe length upstream and five diameters (D) of straight pipe length downstream. Rated Accuracy is based on the number of pipe diameter from an upstream disturbance. No K-factor correction is required if the meter is installed with 35 D upstream and 5 D downstream. The value of the K-factor may shift up to 0.5% when the upstream straight pipe length is between 10D and 35D. Please see Technical Data Sheet (00816-0100-3250) on Installation Effects for optional K-factor corrections. This effect can be corrected in the electronics.

**Tagging**


The flowmeter will be tagged at no charge. All tags are stainless steel. The standard tag is permanently attached to the flowmeter. Character height is 1/16-in. (1,6 mm). A wired-on tag is available on request. Character height on the wire-on tag is 0.236-in. (6 mm). Wire on tags can contain five lines with an average of 19 characters per line at standard character height.

**Flow calibration information**

Flowmeter calibration and configuration information is provided with every flowmeter. For a certified copy of flow calibration data, Option Q4 must be ordered in the model number.

**Figure 1. Rosemount 8800 Vortex Flowmeter Ambient/Process Temperature Limits**

*Shows combinations of ambient and process temperatures needed to remain at or below 185 °F (85 °C) housing temperature.*

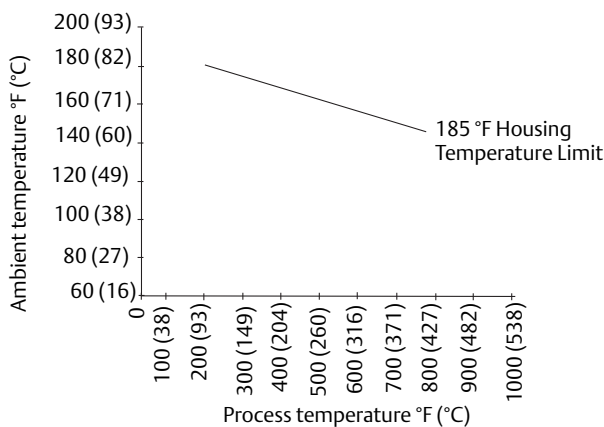

*Meter and pipe insulated with 3 inches of ceramic fiber insulation. Horizontal Pipe and Vertical meter position.*

## Product Certifications

### Approved Manufacturing Locations

Rosemount Inc. — Eden Prairie, Minnesota, USA

Emerson Process Management BV - Ede, The Netherlands

Emerson Process Management Flow Technologies Company, Ltd  
- Nanjing, Jiangsu Province, P.R. China

SC Emerson SRL - Cluj, Romania

### Flameproof enclosure Ex d protection type in accordance with IEC 60079-1, EN 60079-1

- Transmitters with Flameproof enclosure type protection shall only be opened when power is removed.
- Closing of entries in the device must be carried out using the appropriate Ex d cable gland or blanking plug. Unless otherwise marked on housing, the standard conduit entry thread forms are 1/2-14 NPT.



### Type n protection type in accordance with IEC 60079-15, EN60079-15



Closing of entries in the device must be carried out using the appropriate Ex e or Ex n cable gland and metal blanking plug or any appropriate ATEX or IECEx approved cable gland and blanking plug with IP66 rating certified by an EU approved certification body.

### European Directive Information

The CE Declaration of Conformity for all applicable European directives for this product can be found on our website at [www.rosemount.com](http://www.rosemount.com). A hard copy may be obtained by contacting our local sales office.

### ATEX Directive

Rosemount Inc. complies with the ATEX Directive.

### European Pressure Equipment Directive (PED)

#### Rosemount 8800D Vortex Flowmeter Line Size 40 mm to 300 mm

Certificate Number 4741-2014-CE-HOU-DNV  
CE 0575

Module H Conformity Assessment

Mandatory CE-marking for flowmeters in accordance with Article 15 of the PED can be found on the flowtube body. Flowmeter categories I – III use module H for conformity assessment procedures.

### Rosemount 8800D Vortex Flowmeter Line Size 15 mm and 25 mm

#### Sound Engineering Practice

Flowmeters that are SEP are outside the scope of PED and cannot be marked for compliance with PED.

### Hazardous Location Certifications

#### Rosemount 8800D

#### North American Certifications

##### Factory Mutual (FM)

- E5** Explosionproof-Intrinsically Safe for Class I, Division 1, Groups B, C, and D;  
Dust-ignition proof for Class II/III, Division 1, Groups E, F, and G;  
Temperature Code T6 (-50 °C ≤ Ta ≤ 70 °C)  
Factory Sealed  
Enclosure Type 4X, IP66
- I5** Intrinsically safe for use in Class I, II, III Division 1, Groups A, B, C, D, E, F, and G;  
Non-incendive for Class I, Division 2, Groups A, B, C, and D NIFW (Non-incendive Field Wiring) when installed per Rosemount Drawing 08800-0116  
Temperature Code T4 (-50 °C ≤ Ta ≤ 70 °C) 4-20 mA HART  
Temperature Code T4 (-50 °C ≤ Ta ≤ 60 °C) Fieldbus  
Enclosure Type 4X, IP66
- IE** FISCO for Class I, II, III, Division 1, Groups A, B, C, D, E, F and G;  
FNICO for Class 1 Division 2, Groups A, B, C, and D  
Temperature Code T4 (-50 °C ≤ Ta ≤ 60 °C)  
when installed per Rosemount control drawing 08800-0116  
Enclosure Type 4X, IP66
- K5** E5 and I5 Combination

#### *Special Conditions for Safe Use (X):*

1. When fitted with 90V transient suppressors (T1 Option), the equipment is not capable of passing the 500V insulation test. This must be taken into account upon installation.
2. The Model 8800D Vortex Flowmeter when ordered with aluminum electronics housing is considered to constitute a potential risk of ignition by impact or friction. Care should be taken into account during installation and use to prevent impact or friction.



**Canadian Standards Association (CSA)**

- E6** Explosion-Proof for Class I, Division 1, Groups B, C, and D; Dust-ignition proof for Class II and Class III, Division 1, Groups E, F, and G  
Class I, Zone 1, Ex d[ia] IIC  
Temperature Code T6 (-50 °C ≤ Ta ≤ 70 °C)  
Factory Sealed  
Single Seal  
Enclosure Type 4X
- I6** Intrinsically safe for use in Class I, II, III Division 1, Groups A, B, C, D, E, F, G;  
Non-incendive for Class I, Division 2, Groups A, B, C and D  
Temperature Code T4 (-50 °C ≤ Ta ≤ 70 °C) 4-20 mA HART  
Temperature Code T4 (-50 °C ≤ Ta ≤ 60 °C) Fieldbus  
Single Seal.  
Enclosure Type 4X.
- IF** FISCO for Class I, Division 1, Groups A, B, C, and D;  
FNICO for Class 1 Division 2, Groups A, B, C, and D.  
Temperature Code T4 (-50 °C ≤ Ta ≤ 60 °C).  
When installed per Rosemount drawing 08800-0112  
Enclosure Type 4X

**K6** E6 and I6 Combination

**Combination Certifications**

**KB** E5, I5, E6, and I6 Combination

**European Certifications**

**ATEX Intrinsic Safety**

EN 60079-0: 2012  
EN 60079-11: 2012

- I1** Certification No. Baseefa05ATEX0084X  
ATEX Marking  
⊕ II 1 G Ex ia IIC T4 Ga (-60 °C ≤ Ta ≤ 70 °C) 4-20 HART  
⊕ II 1 G Ex ia IIC T4 Ga (-60 °C ≤ Ta ≤ 60 °C) Fieldbus  
CE 0575

| 4-20 mA HART entity parameters         | Fieldbus entity parameters | FISCO input parameters    |
|--|----------------------------|---------------------------|
| U <sub>i</sub> = 30 VDC                | U <sub>i</sub> = 30 VDC    | U <sub>i</sub> = 17.5 VDC |
| I <sub>i</sub> <sup>(1)</sup> = 185 mA | I <sub>i</sub> = 300 mA    | I <sub>i</sub> = 380 mA   |
| P <sub>i</sub> <sup>(1)</sup> = 1.0 W  | P <sub>i</sub> = 1.3 W     | P <sub>i</sub> = 5.32 W   |
| C <sub>i</sub> = 0 μF                  | C <sub>i</sub> = 0 μF      | C <sub>i</sub> = 0 μF     |
| L <sub>i</sub> < 0.97 mH               | L <sub>i</sub> < 10 μH     | L <sub>i</sub> < 10 μH    |

(1) Total for transmitter.

**ATEX FISCO**

- IA** Certification No. Baseefa05ATEX0084X  
ATEX Marking  
⊕ II 1 G Ex ia IIC T4 Ga (-60 °C ≤ Ta ≤ 60 °C)  
CE 0575

**Special Conditions for Safe Use (X):**

1. When fitted with 90V transient suppressors (T1 Option), the equipment is not capable of passing the 500V isolation test. This must be taken into account upon installation.
2. The enclosure may be made from aluminium alloy and given a protective polyurethane paint finish; however, care should be taken to protect it from impact or abrasion when located in Zone 0 environment. The polyurethane paint finish may constitute an electrostatic hazard and must only be cleaned with a damp cloth.
3. When the equipment is installed, particular precautions must be taken to ensure taking into account the effect of process fluid temperature, that the ambient temperature of the electrical housing of the equipment meets the marked protection type temperature range.

**ATEX Type N Certification**

EN 60079-0: 2012  
EN 60079-11: 2012  
EN 60079-15: 2010

- N1** Certification No. Baseefa05ATEX0085X  
ATEX Marking  
⊕ II 3 G Ex nA ic IIC T5 Gc (-50 °C ≤ Ta ≤ 70 °C) 4-20 mA HART  
⊕ II 3 G Ex nA ic IIC T5 Gc (-50 °C ≤ Ta ≤ 60 °C) Fieldbus  
Input Parameters:  
Maximum Working Voltage = 42 VDC Max 4-20 mA HART  
Maximum Working Voltage = 32 VDC Max Fieldbus

**Special Conditions for Safe Use (X):**

1. When fitted with 90V transient suppressors (T1 Option), the equipment is not capable of passing the 500V isolation test. This must be taken into account upon installation.
2. The enclosure may be made from aluminium alloy with a protective polyurethane paint finish. The polyurethane paint finish may constitute an electrostatic hazard and must only be cleaned with a damp cloth.
3. When the equipment is installed, particular precautions must be taken to ensure, taking into account the effect of process fluid temperature, that the ambient temperature of the electrical housing of the equipment meets the marked protection type temperature range.

**ATEX Flameproof Certification**

EN 60079-0: 2009  
EN 60079-1: 2007  
EN 60079-11: 2012

- E1** Certificate: KEMA99ATEX3852X  
Integral Flowmeter marked:  
⊕ II 1/2 G Ex d [ia] IIC T6 Ga/Gb (-50 °C ≤ Ta ≤ 70 °C)  
Remote Transmitter marked:  
⊕ II 2(1) G Ex d [ia Ga] IIC T6 Gb (-50 °C ≤ Ta ≤ 70 °C)  
with meter body marked:  
⊕ II 1 G Ex ia IIC T6 Ga (-50 °C ≤ Ta ≤ 70 °C)  
42 VDC Max 4-20 mA HART  
32 VDC Max Fieldbus  
U<sub>m</sub> = 250V

**Installation instructions:**

1. The cable and conduit entry devices shall be of a certified flameproof type Ex d, suitable for the conditions of use and correctly installed.
2. Unused apertures shall be closed with suitable blanking elements.
3. When the ambient temperature at the cable or conduit entries exceed 60 °C, cables suitable for at least 90 °C shall be used.
4. Remote mounted sensor; in type of protection EX ia IIC, only to be connected to the associated Model 8800D Vortex Flowmeter electronics. the maximum allowable length of the interconnecting cable is 152 m (500 ft).

**Special Conditions for Safe Use (X):**

1. For information regarding the dimensions of the flameproof joints, the manufacturer shall be contacted.
2. The Flowmeter shall be provided with special fasteners of property class A2-70 or A4-70.
3. Units marked with "Warning: Electrostatic Charging Hazard" may use non-conductive paint thicker than 0.2 mm. Precaution shall be taken to avoid ignition due to electrostatic charge on the enclosure.

**K1** E1, I1, and N1 Combination

**International IECEx Certifications****Intrinsic Safety**

IEC 60079-0: 2011  
IEC 60079-11: 2011

- I7** Certificate No. IECEx BAS05.0028X  
Ex ia IIC T4 Ga (-60 °C ≤ T<sub>a</sub> ≤ 70 °C) 4-20 mA HART  
(-60 °C ≤ T<sub>a</sub> ≤ 60 °C) Fieldbus

| 4-20 mA HART entity parameters |           | Fieldbus entity parameters |          | FISCO input parameters |            |
|--------------------------------|-----------|----------------------------|----------|------------------------|------------|
| U <sub>i</sub>                 | = 30 VDC  | U <sub>i</sub>             | = 30 VDC | U <sub>i</sub>         | = 17.5 VDC |
| I <sub>i</sub> <sup>(1)</sup>  | = 185 mA  | I <sub>i</sub>             | = 300 mA | I <sub>i</sub>         | = 380 mA   |
| P <sub>i</sub> <sup>(1)</sup>  | = 1.0 W   | P <sub>i</sub>             | = 1.3 W  | P <sub>i</sub>         | = 5.32 W   |
| C <sub>i</sub>                 | = 0 μF    | C <sub>i</sub>             | = 0 μF   | C <sub>i</sub>         | = 0 μF     |
| L <sub>i</sub>                 | < 0.97 mH | L <sub>i</sub>             | < 10 μH  | L <sub>i</sub>         | < 10 μH    |

(1) Total for transmitter.

**FISCO**

- IG** Certificate: IECEx BAS 05.0028X  
Ex ia IIC T4 Ga (-60 °C ≤ T<sub>a</sub> ≤ 60 °C)

**Special Conditions for Safe Use (X):**

1. When fitted with 90V transient suppressors (T1 Option), the equipment is not capable of passing the 500V isolation test. This must be taken into account upon installation.
2. The enclosure may be made from aluminium alloy and given a protective polyurethane paint finish; however, care should be taken to protect it from impact or abrasion when located in Zone 0 environment. The polyurethane paint finish may constitute an electrostatic hazard and must only be cleaned with a damp cloth.
3. When the equipment is installed, particular precautions must be taken to ensure, taking into account the effect of process fluid temperature, that the ambient temperature of the electrical housing of the equipment meets the marked protection type temperature range.

**Type n Certification**

IEC 60079-0: 2011  
IEC 60079-11: 2011  
IEC 60079-15: 2010

- N7** Certificate No. IECEx BAS05.0029X  
Ex nA ic IIC T5 Gc (-50 °C ≤ T<sub>a</sub> ≤ 70 °C) 4-20 mA HART  
Ex nA ic IIC T5 Gc (-50 °C ≤ T<sub>a</sub> ≤ 60 °C) Fieldbus  
Maximum Working Voltage = 42 VDC 4-20 mA HART  
Maximum Working Voltage = 32 VDC Fieldbus

**Special Conditions for Safe Use (X):**

1. When fitted with 90V transient suppressors (T1 Option), the equipment is not capable of passing the 500V isolation test. This must be taken into account upon installation.
2. The enclosure may be made from aluminium alloy with a protective polyurethane paint finish. The polyurethane paint finish may constitute an electrostatic hazard and must only be cleaned with a damp cloth.
3. When the equipment is installed, particular precautions must be taken to ensure, taking into account the effect of process fluid temperature, that the ambient temperature of the electrical housing of the equipment meets the marked protection type temperature range.

**Flameproof Certification**

IEC 60079-0: 2007-10  
IEC 60079-1: 2007-04  
IEC 60079-11: 2011  
IEC 60079-26: 2006

- E7** Certificate: IECEx KEM05.0017X  
Integral Flowmeter marked:  
Ex d [ia] IIC T6 Ga/Gb (-50 °C ≤ T<sub>a</sub> ≤ 70 °C)  
Remote Transmitter marked:  
Ex d [ia Ga] IIC T6 Gb (-50 °C ≤ T<sub>a</sub> ≤ 70 °C)  
with meter body marked:  
Ex ia IIC T6 Ga (-50 °C ≤ T<sub>a</sub> ≤ 70 °C)  
42 VDC Max 4-20 mA HART  
32 VDC Max Fieldbus  
U<sub>m</sub> = 250V

**Installation instructions:**

1. The cable and conduit entry devices shall be of a certified flameproof type Ex d, suitable for the conditions of use and correctly installed.
2. Unused apertures shall be closed with suitable blanking elements.
3. When the ambient temperature at the cable or conduit entries exceed 60 °C, cables suitable for at least 90 °C shall be used.
4. The remote mounted sensor may only be connected to the transmitter with the associated cable, supplied by the manufacturer.

**Special Conditions for Safe Use (X):**

1. For information regarding the dimensions of the flameproof joints, the manufacturer shall be contacted.
2. The Flowmeter shall be provided with special fasteners of property class A2-70 or A4-70.
3. Units marked with “Warning: Electrostatic Charging Hazard” may use non-conductive paint thicker than 0.2 mm. Precaution shall be taken to avoid ignition due to electrostatic charge on the enclosure.

**Combination Certifications**

**K7** E7, I7, and N7 Combination

**Chinese Certifications (NEPSI)**

**Flameproof Certification**

GB3836.1 – 2010  
 GB3836.2 – 2010  
 GB3836.4 – 2010  
 GB3836.20 – 2010

**E3** Certification No. GYJ12.1493X  
 Ex ia / d IIC T6 Ga/Gb (Integral Transmitter)  
 Ex d [ia Ga] IIC T6 Gb (Remote Transmitter)  
 Ex ia IIC T6 Ga (Remote Sensor)  
 Ambient temperature range: -50 °C ≤ Ta ≤ +70 °C  
 Process temperature range: -202 °C to +427 °C  
 Power Supply: 42 Vdc Max 4-20 mA HART  
 Power Supply: 32 Vdc Max Fieldbus

**Special Conditions for Safe Use (X):**

1. The maximum allowable length of the interconnecting cable between transmitter and sensor is 152 m. The cable shall also be provided by Rosemount Inc., or by Emerson Process Management Flow Technologies Co., Ltd.
2. Suitable heat-resisting cables rated at least +80 °C shall be used when the temperature around the cable entry exceeds +60 °C.
3. Dimensions of flameproof joints are other than the relevant minimum or maximum specified in Table 3 of GB3836.2-2010. Contact manufacturer for details.
4. The Flowmeter is provided with special fasteners of property class A2-70 or A4-70.
5. Any friction should be prevented in order to avoid the risk of electrostatic charge on the enclosure due to

non-conductive paint.

6. The earthing terminal should be connected to the ground reliably at site.
7. Do not open when energized.
8. The cable entry holes have to be connected by means of suitable entry device or stopping plugs with type of protection of Ex d IIC Gb the cable entry device and stopping plugs are approved in accordance with GB3836.1-2010 and GB3836.2-2010, and which are covered by a separate examination certificate, any unused entry hole is to be fitted with type of protection of Ex d IIC Gb flameproof stopping plug.
9. Users are forbidden to change the configuration to ensure the explosion protection performance of the equipment. Any faults shall be settled with experts from the manufacturer.
10. Precautions shall be taken to ensure that the electronic parts are within permissible ambient temperature considering the effect of the allowed fluid temperature.
11. During installation, operation and maintenance, users shall comply with the relevant requirements of the product instruction manual, GB3836.13-1997 “Electrical apparatus for explosive gas atmospheres Part 13: Repair and overhaul for apparatus used in explosive gas atmospheres”, GB3836.15-2000 “Electrical apparatus for explosive gas atmospheres Part 15: Electrical installations in hazardous areas (other than mines)”, GB3836.16-2006 “Electrical apparatus for explosive gas atmospheres Part 16: Inspection and maintenance of electrical installation (other than mines)”, and GB50257-1996 “Code for construction and acceptance of electrical device for explosion atmospheres and fire hazard electrical equipment installation engineering”.

**I. S. Certification**

GB3836.1 – 2010  
 GB3836.20 – 2010  
 GB3836.4 – 2010  
 GB12476.1 – 2010

**I3** Certification No. GYJ12.1106X  
 Ex ia IIC T4 Ga (-60 °C ≤ Ta ≤ + 70 °C) HART  
 Ex ia IIC T4 Ga (-60 °C ≤ Ta ≤ + 60 °C) Fieldbus

| 4-20 mA HART entity parameters |           | Fieldbus entity parameters |          | FISCO input parameters |            |
|--------------------------------|-----------|----------------------------|----------|------------------------|------------|
| U <sub>i</sub>                 | = 30 VDC  | U <sub>i</sub>             | = 30 VDC | U <sub>i</sub>         | = 17.5 VDC |
| I <sub>i</sub> <sup>(1)</sup>  | = 185 mA  | I <sub>i</sub>             | = 300 mA | I <sub>i</sub>         | = 380 mA   |
| P <sub>i</sub> <sup>(1)</sup>  | = 1.0 W   | P <sub>i</sub>             | = 1.3 W  | P <sub>i</sub>         | = 5.32 W   |
| C <sub>i</sub>                 | = 0 μF    | C <sub>i</sub>             | = 0 μF   | C <sub>i</sub>         | = 0 μF     |
| L <sub>i</sub>                 | ≤ 0.97 mH | L <sub>i</sub>             | ≤ 10 μH  | L <sub>i</sub>         | ≤ 10 μH    |

(1) Total for transmitter.

**FISCO/FINCO**

**IH** Certification No. IECEx BAS 05.0028X  
 Ex ia IIC T4 Ga (-60 °C ≤ Ta ≤ +60 °C)

**Special Conditions for Safe Use (X):**

1. The maximum allowable length of the interconnecting cable between transmitter and sensor is 152 m. The cable shall also be provided by manufacturer.
2. When transient protection terminal block applied to this product, during installation, users shall comply with Clause 12.2.4 in GB3836.15-2000 “Electrical apparatus for explosive gas atmospheres Part 15: Electrical installations in hazardous areas (other than mines).”
3. Suitable heat-resisting cables rated at least +80 °C shall be used when the temperature around the cable entry exceeds +60 °C.
4. Only be connected to the certified associated apparatus, the Vortex Flowmeter could be used in the explosive atmosphere. The connection should be complied with the requirements of the manual of the associated apparatus and the Vortex Flowmeter.
5. The enclosure should be taken to protect it from impact.
6. Any friction should be prevented in order to avoid the risk of electrostatic charge on the enclosure due to non-conductive paint.
7. The cable with shield is suitable for connection, and the shield should be connected to earth.
8. The enclosure shall be kept from the dust, but the dust shall not be blown by compressed air.
9. The cable entry holes have to be connected by means of suitable cable entry, the way of being installed shall be ensure that the equipment satisfies degree of protection IP66 according to GB4208-2008.
10. Users are forbidden to change the configuration to ensure the explosion protection performance of the equipment. Any faults shall be settled with experts from the manufacturer.
11. Precautions shall be taken to ensure that the electronic parts are within permissible ambient temperature considering the effect of the allowed fluid temperature.
12. During installation, operation and maintenance, users shall comply with the relevant requirements of the product instruction manual, GB3836.13-1997 “Electrical apparatus for explosive gas atmospheres Part 13: Repair and overhaul for apparatus used in explosive gas atmospheres”, GB3836.15-2000 “Electrical apparatus for explosive gas atmospheres Part 15: Electrical installations in hazardous areas (other than mines)”, GB3836.16-2006 “Electrical apparatus for explosive gas atmospheres Part 16: Inspection and maintenance of electrical installation (other than mines)”, and GB50257-1996 “Code for construction and acceptance of electrical device for explosion atmospheres and fire hazard electrical equipment installation engineering”.

**Type “n” Certification**

GB3836.1 – 2010  
 GB3836.8 – 2003  
 GB3836.4 – 2010

**Special Conditions for Safe Use (X):**

1. The maximum allowable length of the interconnecting cable between transmitter and sensor is 152 m. The cable shall also be provided by the manufacturer.
2. Suitable heat-resisting cables rated at least +80 °C shall be used when the temperature around the cable entry exceeds +60 °C.
3. When transient protection terminal block (The Other Option is T1) applied to this product, during installation, users shall comply with Clause 12.2.4 in GB3836.15-2000 “Electrical apparatus for explosive gas atmospheres Part 15: Electrical installations in hazardous areas (other than mines).”
4. Any friction should be prevented in order to avoid the risk of electrostatic charge on the enclosure due to non-conductive paint.
5. Do not open when energized.
6. The cable entry holes have to be connected by means of suitable cable entry, the way of being installed shall be ensure that the equipment satisfies degree of protection IP54 according to GB4208-2008.
7. Users are forbidden to change the configuration to ensure the explosion protection performance of the equipment. Any faults shall be settled with experts from the manufacturer.
8. Precautions shall be taken to ensure that the electronic parts are within permissible ambient temperature considering the effect of the allowed fluid temperature.
9. During installation, operation and maintenance, users shall comply with the relevant requirements of the product instruction manual, GB3836.13-1997 “Electrical apparatus for explosive gas atmospheres Part 13: Repair and overhaul for apparatus used in explosive gas atmospheres”, GB3836.15-2000 “Electrical apparatus for explosive gas atmospheres Part 15: Electrical installations in hazardous areas (other than mines)”, GB3836.16-2006 “Electrical apparatus for explosive gas atmospheres Part 16: Inspection and maintenance of electrical installation (other than mines)”, and GB50257-1996 “Code for construction and acceptance of electrical device for explosion atmospheres and fire hazard electrical equipment installation engineering”.

**Combination Certifications: China**

**K3** E3, I3, and N3 Combination

**Brazilian Certifications - INMETRO**

**I. S. Certification**

ABNT NBR IEC 60079-0: 2008  
 ABNT NBR IEC 60079-11: 2009  
 ABNT NBR IEC 60079-26: 2008

- I2** Certification Number: NCC 11.0699 X  
 Ex ia IIC T4 Ga (-60 °C ≤ Ta ≤ + 70 °C) HART  
 Ex ia IIC T6 Ga (-50 °C ≤ Ta ≤ + 60 °C) Fieldbus
- IB** Certification Number: NCC 11.0699 X  
 Ex ia IIC T4 Ga (-60 °C ≤ Ta ≤ + 60 °C) FISCO

| 4-20 mA HART entity parameters | Fieldbus entity parameters | FISCO input parameters    |
|--------------------------------|----------------------------|---------------------------|
| $U_i = 30 \text{ VDC}$         | $U_i = 30 \text{ VDC}$     | $U_i = 17.5 \text{ VDC}$  |
| $I_i^{(1)} = 185 \text{ mA}$   | $I_i = 300 \text{ mA}$     | $I_i = 380 \text{ mA}$    |
| $P_i^{(1)} = 1.0 \text{ W}$    | $P_i = 1.3 \text{ W}$      | $P_i = 5.32 \text{ W}$    |
| $C_i = 0 \mu\text{F}$          | $C_i = 0 \mu\text{F}$      | $C_i = 0 \mu\text{F}$     |
| $L_i \leq 0.97 \text{ mH}$     | $L_i \leq 10 \mu\text{H}$  | $L_i \leq 10 \mu\text{H}$ |

(1) Total for transmitter.

**Special Conditions for Safe Use (X):**

1. When fitted with 90V transient suppressors, the equipment is not capable of passing the 500V insulation test. This must be taken into account upon installation.
2. The enclosure may be made from aluminum alloy with a protective polyurethane paint finish; however, care should be taken to protect it from impact or abrasion when located in Zone 0. The polyurethane paint finish may constitute an electrostatic hazard and must only be cleaned with a damp cloth.
3. When the equipment is installed, particular precautions must be taken to ensure, taking into account the effect of process fluid temperature, that the ambient temperature of the electrical housing of the equipment meets the marked protection type temperature range.

**Flameproof Certification**

ABNT NBR IEC 60079-0: 2008  
 ABNT NBR IEC 60079-1: 2009  
 ABNT NBR IEC 60079-11: 2009  
 ABNT NBR IEC 60079-26: 2008

- E2** Certification Number: NCC 11.0622 X  
 Ex d [ia] IIC T6 Ga/Gb (Integral Transmitter)  
 Ex d [ia Ga] IIC T6 Gb (Remote Transmitter)  
 Ex ia IIC T6 Ga (Remote Sensor)  
 Ambient temperature range: -50 °C ≤ Ta ≤ +70 °C  
 Process temperature range: -202 °C to +427 °C  
 Power Supply: 42 Vdc Max 4-20 mA HART  
 Power Supply: 32 Vdc Max Fieldbus  
 Transmitter Um = 250 V

**Remote mounted sensor**

In type of protection Ex ia IIC, only to be connected to the associated Model 8800D Vortex Flowmeter electronics. The maximum length of the interconnecting cable is 152 m (500 ft).

**Special Conditions for Safe Use (X):**


1. For information regarding the dimensions of the flameproof joints, the manufacturer shall be contacted.
2. The Flowmeter is provided with special fasteners of property class A2-70 of A4-70.
3. Units marked with “Warning: Electrostatic Charging Hazard” may use non-conductive paint thicker than 0.2 mm. Precautions shall be taken to avoid ignition due to electrostatic charge of the enclosure.

**Combined Certifications: INMETRO**

- K3** E2 and I2 Combination

# Dimensional Drawings

Figure 2. Flanged-Style Flowmeter (1/2-through 12-in./15 through 300 mm Line Sizes)

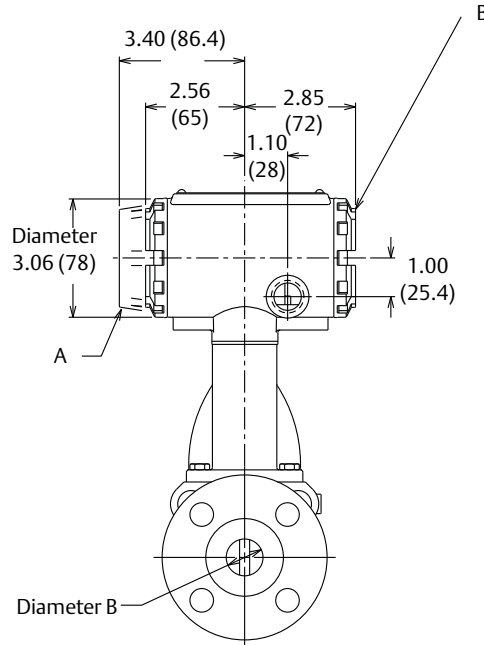

- A. Display Option
- B. Terminal Cover

Diagram illustrated without MTA option


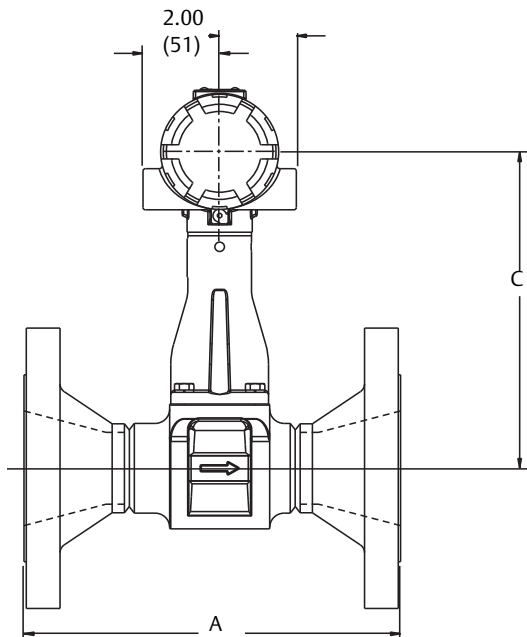


Diagram illustrated with MTA option

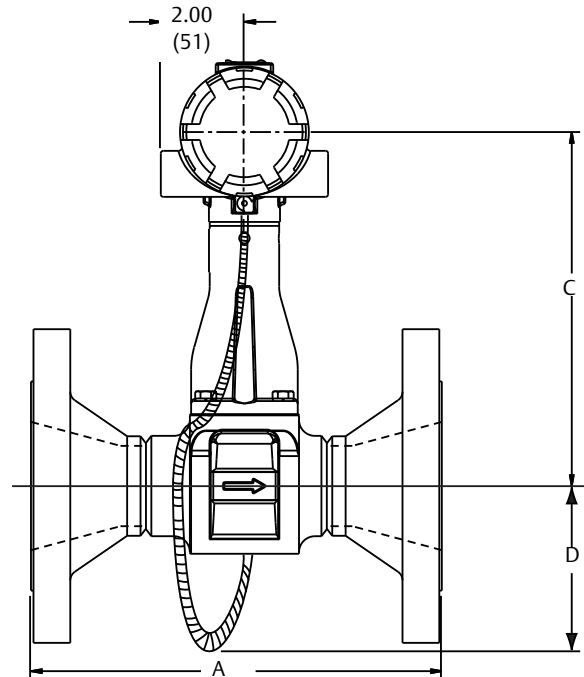

Dimensions are in inches (millimeters).

Table 21. Flanged-Style Flowmeter (1/2-in. through 2-in./15 through 50 mm Line Sizes)

| Nominal size<br>inch (mm) | Flange<br>rating | Face-to-face A<br>inch (mm) | A-ANSI RTJ<br>inch (mm) | Diameter B<br>inch (mm) | C<br>inch (mm) | Weight<br>lb (kg) |
|---------------------------|------------------|-----------------------------|-------------------------|-------------------------|----------------|-------------------|
| 1/2 (15)                  | Class 150        | 6.8 (173)                   | –                       | 0.54 (13,7)             | 7.6 (193)      | 9.1 (4,1)         |
|                           | Class 300        | 7.2 (183)                   | 7.6 (193)               | 0.54 (13,7)             | 7.6 (193)      | 10.4 (4,7)        |
|                           | Class 600        | 7.7 (196)                   | 7.6 (193)               | 0.54 (13,7)             | 7.6 (193)      | 10.8 (4,9)        |
|                           | Class 900        | 8.3 (211)                   | 8.3 (211)               | 0.54 (13,7)             | 7.6 (193)      | 15.3 (6,9)        |
|                           | PN 16/40         | 6.1 (155)                   | –                       | 0.54 (13,7)             | 7.6 (193)      | 10.4 (4,7)        |
|                           | PN 100           | 6.6 (168)                   | –                       | 0.54 (13,7)             | 7.6 (193)      | 12.4 (5,6)        |
| 1/2 (15)                  | JIS 10K/20K      | 6.3 (160)                   | –                       | 0.54 (13,7)             | 7.6 (193)      | 10.2 (4,6)        |
|                           | JIS 40K          | 7.3 (185)                   | –                       | 0.54 (13,7)             | 7.6 (193)      | 13.7 (6,2)        |
| 1 (25)                    | Class 150        | 7.5 (191)                   | 8.0 (203)               | 0.95 (24,1)             | 7.7 (196)      | 12.3 (5,6)        |
|                           | Class 300        | 8.0 (203)                   | 8.5 (216)               | 0.95 (24,1)             | 7.7 (196)      | 15.0 (6,8)        |
|                           | Class 600        | 8.5 (216)                   | 8.5 (216)               | 0.95 (24,1)             | 7.7 (196)      | 15.8 (7,2)        |
|                           | Class 900        | 9.4 (239)                   | 9.4 (239)               | 0.95 (24,1)             | 7.7 (196)      | 24.1 (11,1)       |
|                           | Class 1500       | 9.4 (239)                   | 9.4 (239)               | 0.95 (24,1)             | 7.7 (196)      | 24.4 (11,1)       |
|                           | PN 16/40         | 6.2 (157)                   | –                       | 0.95 (24,1)             | 7.7 (196)      | 13.6 (6,2)        |
|                           | PN 100           | 7.7 (196)                   | –                       | 0.95 (24,1)             | 7.7 (196)      | 19.6 (8,9)        |
|                           | PN 160           | 7.7 (196)                   | –                       | 0.95 (24,1)             | 7.7 (196)      | 19.6 (8,9)        |
|                           | JIS 10K/20K      | 6.5 (165)                   | –                       | 0.95 (24,1)             | 7.7 (196)      | 14.0 (6,3)        |
| JIS 40K                   | 7.8 (198)        | –                           | 0.95 (24,1)             | 7.7 (196)               | 17.7 (7,9)     |                   |
| 1 1/2 (40)                | Class 150        | 8.2 (208)                   | 8.7 (221)               | 1.49 (37,8)             | 8.1 (206)      | 17.6 (8,0)        |
|                           | Class 300        | 8.7 (221)                   | 9.2 (234)               | 1.49 (37,8)             | 8.1 (206)      | 23.0 (10,4)       |
|                           | Class 600        | 9.3 (236)                   | 9.3 (236)               | 1.49 (37,8)             | 8.1 (206)      | 25.5 (11,6)       |
|                           | Class 900        | 10.3 (262)                  | 10.3 (262)              | 1.49 (37,8)             | 8.1 (206)      | 36.6 (16,6)       |
|                           | Class 1500       | 10.3 (262)                  | 10.3 (262)              | 1.49 (37,8)             | 8.1 (206)      | 36.6 (16,6)       |
|                           | PN 16/40         | 6.9 (175)                   | –                       | 1.49 (37,8)             | 8.1 (206)      | 19.4 (8,8)        |
|                           | PN 100           | 8.2 (208)                   | –                       | 1.49 (37,8)             | 8.1 (206)      | 28.0 (12,7)       |
|                           | PN 160           | 8.4 (213)                   | –                       | 1.49 (37,8)             | 8.1 (206)      | 29.5 (13,4)       |
|                           | JIS 10K/20K      | 7.3 (185)                   | –                       | 1.49 (37,8)             | 8.1 (206)      | 18.6 (8,4)        |
| JIS 40K                   | 8.4 (213)        | –                           | 1.49 (37,8)             | 8.1 (206)               | 25.5 (11,6)    |                   |
| 2 (50)                    | Class 150        | 9.2 (234)                   | 9.7 (246)               | 1.92 (48,8)             | 8.5 (216)      | 22.0 (10,0)       |
|                           | Class 300        | 9.7 (246)                   | 10.4 (264)              | 1.92 (48,8)             | 8.5 (216)      | 26.1 (11,8)       |
|                           | Class 600        | 10.5 (267)                  | 10.6 (269)              | 1.92 (48,8)             | 8.5 (216)      | 29.8 (13,5)       |
|                           | Class 900        | 12.7 (323)                  | 12.9 (328)              | 1.92 (48,8)             | 8.5 (216)      | 59.5 (27,0)       |
|                           | Class 1500       | 12.7 (323)                  | 12.9 (328)              | 1.79 (45,5)             | 8.5 (216)      | 59.5 (27,0)       |
|                           | PN 16/40         | 8.0 (203)                   | –                       | 1.92 (48,8)             | 8.5 (216)      | 23.2 (10,5)       |
|                           | PN 63/64         | 9.1 (231)                   | –                       | 1.92 (48,8)             | 8.5 (216)      | 30.8 (13,9)       |
|                           | PN 100           | 9.6 (244)                   | –                       | 1.92 (48,8)             | 8.5 (216)      | 36.5 (16,6)       |
|                           | PN 160           | 10.2 (259)                  | –                       | 1.92 (48,8)             | 8.5 (216)      | 38.8 (17,6)       |
|                           | JIS 10K          | 7.7 (195)                   | –                       | 1.92 (48,8)             | 8.5 (216)      | 19.5 (8,8)        |
|                           | JIS 20K          | 8.3 (210)                   | –                       | 1.92 (48,8)             | 8.5 (216)      | 20.4 (9,3)        |
|                           | JIS 40K          | 9.8 (249)                   | –                       | 1.92 (48,8)             | 8.5 (216)      | 28.5 (12,9)       |

**Table 22. Flanged-Style Flowmeter (3-in. through 6-in./80 through 150mm Line Sizes) (refer to previous drawing)**


| Nominal size<br>inch (mm) | Flange rating | Face-to-face A<br>inch (mm) | A ANSI RTJ<br>inch (mm) | Diameter B<br>inch (mm) | C inch<br>(mm) | Weight lb (kg) |
|---------------------------|---------------|-----------------------------|-------------------------|-------------------------|----------------|----------------|
| 3 (80)                    | Class 150     | 9.9 (251)                   | 10.4 (264)              | 2.87 (72,9)             | 9.1 (231)      | 37.2 (16,9)    |
|                           | Class 300     | 10.6 (269)                  | 11.2 (284)              | 2.87 (72,9)             | 9.1 (231)      | 46.5 (21,1)    |
|                           | Class 600     | 11.4 (290)                  | 11.5 (292)              | 2.87 (72,9)             | 9.1 (231)      | 52.6 (23,8)    |
|                           | Class 900     | 12.9 (328)                  | 13.0 (330)              | 2.87 (72,9)             | 9.1 (231)      | 76.1 (34,5)    |
|                           | Class 1500    | 14.1 (358)                  | 14.2 (361)              | 2.60 (66)               | 9.1 (231)      | 108.9 (49,4)   |
|                           | PN 16/40      | 8.9 (226)                   | –                       | 2.87 (72,9)             | 9.1 (231)      | 36.6 (16,6)    |
|                           | PN 63/64      | 10.0 (254)                  | –                       | 2.87 (72,9)             | 9.1 (231)      | 45.3 (20,6)    |
|                           | PN 100        | 10.5 (267)                  | –                       | 2.87 (72,9)             | 9.1 (231)      | 54.7 (24,8)    |
|                           | PN 160        | 11.1 (282)                  | –                       | 2.87 (72,9)             | 9.1 (231)      | 59.6 (27,0)    |
|                           | JIS 10K       | 7.9 (201)                   | –                       | 2.87 (72,9)             | 9.1 (231)      | 28.0 (12,7)    |
|                           | JIS 20K       | 9.3 (236)                   | –                       | 2.87 (72,9)             | 9.1 (231)      | 35.4 (16,1)    |
|                           | JIS 40K       | 11.0 (279)                  | –                       | 2.87 (72,9)             | 9.1 (231)      | 50.3 (22,8)    |
|                           | 4 (100)       | Class 150                   | 10.3 (262)              | 10.8 (274)              | 3.79 (96,3)    | 9.6 (244)      |
| Class 300                 |               | 11.0 (279)                  | 11.6 (295)              | 3.79 (96,3)             | 9.6 (244)      | 71.5 (32,4)    |
| Class 600                 |               | 12.8 (325)                  | 12.9 (328)              | 3.79 (96,3)             | 9.6 (244)      | 97.5 (44,2)    |
| Class 900                 |               | 13.8 (351)                  | 13.9 (353)              | 3.79 (96,3)             | 9.6 (244)      | 120.8 (54,8)   |
| Class 1500                |               | 14.5 (368)                  | 14.6 (371)              | 3.40 (86,4)             | 9.6 (244)      | 162.6 (73,8)   |
| PN 16                     |               | 8.4 (213)                   | –                       | 3.79 (96,3)             | 9.6 (244)      | 40.4 (18,3)    |
| PN 40                     |               | 9.4 (239)                   | –                       | 3.79 (96,3)             | 9.6 (244)      | 49.5 (22,4)    |
| PN 63/64                  |               | 10.4 (264)                  | –                       | 3.79 (96,3)             | 9.6 (244)      | 62.5 (28,3)    |
| PN 100                    |               | 11.3 (287)                  | –                       | 3.79 (96,3)             | 9.6 (244)      | 78.9 (35,8)    |
| PN 160                    |               | 12.1 (307)                  | –                       | 3.79 (96,3)             | 9.6 (244)      | 86.2 (39,1)    |
| JIS 10K                   |               | 8.7 (220)                   | –                       | 3.79 (96,3)             | 9.6 (244)      | 37.5 (17,0)    |
| JIS 20K                   |               | 8.7 (220)                   | –                       | 3.79 (96,3)             | 9.6 (244)      | 45.4 (20,6)    |
| JIS 40K                   |               | 11.8 (300)                  | –                       | 3.79 (96,3)             | 9.6 (244)      | 75.8 (34,4)    |
| 6 (150)                   | Class 150     | 11.6 (295)                  | 12.1 (307)              | 5.7 (144,8)             | 10.8 (274)     | 81 (37)        |
|                           | Class 300     | 12.3 (312)                  | 13.0 (330)              | 5.7 (144,8)             | 10.8 (274)     | 120 (55)       |
|                           | Class 600     | 14.3 (363)                  | 14.4 (366)              | 5.7 (144,8)             | 10.8 (274)     | 187 (55)       |
|                           | Class 900     | 16.1 (409)                  | 16.2 (411)              | 5.14 (130,6)            | 10.8 (274)     | 277.9 (126,0)  |
|                           | Class 1500    | 18.6 (472)                  | 18.8 (478)              | 5.14 (130,6)            | 10.8 (274)     | 375.8 (170,4)  |
|                           | PN 16         | 8.9 (226)                   | –                       | 5.7 (144,8)             | 10.8 (274)     | 66 (30)        |
|                           | PN 40         | 10.5 (267)                  | –                       | 5.7 (144,8)             | 10.8 (274)     | 86 (39)        |
|                           | PN 63/64      | 12.1 (307)                  | –                       | 5.7 (144,8)             | 10.8 (274)     | 130 (59)       |
|                           | PN 100        | 13.6 (345)                  | –                       | 5.7 (144,8)             | 10.8 (274)     | 160 (73)       |
|                           | JIS 10K       | 10.6 (270)                  | –                       | 5.7 (144,8)             | 10.8 (274)     | 70 (32)        |
|                           | JIS 20K       | 10.6 (270)                  | –                       | 5.7 (144,8)             | 10.8 (274)     | 88 (40)        |
|                           | JIS 40K       | 14.2 (361)                  | –                       | 5.7 (144,8)             | 10.8 (274)     | 166 (75)       |



Table 23. Flanged-Style Flowmeter (8-in. through 12-in./200 through 300mm Line Sizes) (refer to previous drawing)


| Nominal size<br>inch (mm) | Flange<br>rating | Face-to-face A<br>inch (mm) | A ANSI RTJ<br>inch (mm) | Diameter B<br>inch (mm) | C inch (mm) | Weight lb (kg) |               |
|---------------------------|------------------|-----------------------------|-------------------------|-------------------------|-------------|----------------|---------------|
| 8 (200)                   | Class 150        | 13.5 (343)                  | 14.0 (356)              | 7.55 (191,8)            | 11.7 (297)  | 141.6 (64,2)   |               |
|                           | Class 300        | 14.3 (363)                  | 14.9 (378)              | 7.55 (191,8)            | 11.7 (297)  | 198.7 (90,1)   |               |
|                           | Class 600        | 16.5 (419)                  | 16.7 (424)              | 7.55 (191,8)            | 11.7 (297)  | 298.6 (135,4)  |               |
|                           | Class 900        | 18.8 (478)                  | 18.9 (480)              | 6.62 (168,1)            | 11.7 (297)  | 479.2 (217,4)  |               |
|                           | Class 1500       | 22.8 (579)                  | 23.2 (589)              | 6.62 (168,1)            | 11.7 (297)  | 652.4 (295,9)  |               |
|                           | PN 10            | 10.4 (264)                  | –                       | 7.55 (191,8)            | 11.7 (297)  | 110.5 (50,1)   |               |
|                           | PN 16            | 10.4 (264)                  | –                       | 7.55 (191,8)            | 11.7 (297)  | 109.4 (49,6)   |               |
|                           | PN 25            | 11.8 (300)                  | –                       | 7.55 (191,8)            | 11.7 (297)  | 137.7 (62,5)   |               |
|                           | PN 40            | 12.5 (318)                  | –                       | 7.55 (191,8)            | 11.7 (297)  | 156.5 (71,0)   |               |
|                           | PN 63/64         | 14.2 (361)                  | –                       | 7.55 (191,8)            | 11.7 (297)  | 217.1 (98,5)   |               |
|                           | PN 100           | 15.8 (401)                  | –                       | 7.55 (191,8)            | 11.7 (297)  | 282.7 (128,2)  |               |
|                           | JIS 10K          | 12.2 (310)                  | –                       | 7.55 (191,8)            | 11.7 (297)  | 110.1 (49,9)   |               |
|                           | JIS 20K          | 12.2 (310)                  | –                       | 7.55 (191,8)            | 11.7 (297)  | 134.5 (61,0)   |               |
|                           | JIS 40K          | 16.5 (419)                  | –                       | 7.55 (191,8)            | 11.7 (297)  | 255.7 (116)    |               |
| 10 (250)                  | Class 150        | 14.5 (368)                  | 15.0 (381)              | 9.56 (243)              | 12.8 (325)  | 197.7 (89,7)   |               |
|                           | Class 300        | 15.8 (401)                  | 16.4 (417)              | 9.56 (243)              | 12.8 (325)  | 286.2 (129,8)  |               |
|                           | Class 600        | 19.0 (483)                  | 19.2 (488)              | 9.56 (243)              | 12.8 (325)  | 477.9 (219,9)  |               |
|                           | PN 10            | 11.9 (302)                  | –                       | 9.56 (243)              | 12.8 (325)  | 157.1 (71,3)   |               |
|                           | PN 16            | 12.0 (305)                  | –                       | 9.56 (243)              | 12.8 (325)  | 161.9 (73,5)   |               |
|                           | PN 25            | 13.5 (343)                  | –                       | 9.56 (243)              | 12.8 (325)  | 198.6 (90,1)   |               |
|                           | PN 40            | 14.8 (376)                  | –                       | 9.56 (243)              | 12.8 (325)  | 246.8 (111,9)  |               |
|                           | PN 63/64         | 16.4 (417)                  | –                       | 9.56 (243)              | 12.8 (325)  | 308.2 (139,8)  |               |
|                           | PN 100           | 18.9 (480)                  | –                       | 9.56 (243)              | 12.8 (325)  | 445.2 (201,9)  |               |
|                           | JIS 10K          | 14.5 (368)                  | –                       | 9.56 (243)              | 12.8 (325)  | 174.5 (79,1)   |               |
|                           | JIS 20K          | 14.5 (368)                  | –                       | 9.56 (243)              | 12.8 (325)  | 221.8 (100,6)  |               |
|                           | JIS 40K          | 18.1 (460)                  | –                       | 9.56 (243)              | 12.8 (325)  | 378.5 (171,7)  |               |
|                           | 12 (300)         | Class 150                   | 16.8 (427)              | 17.3 (439)              | 11.38 (289) | 13.7 (348)     | 297.5 (134,9) |
|                           |                  | Class 300                   | 18.0 (457)              | 18.6 (472)              | 11.38 (289) | 13.7 (348)     | 415.7 (188,6) |
| Class 600                 |                  | 20.5 (521)                  | 20.6 (523)              | 11.38 (289)             | 13.7 (348)  | 595.4 (270,1)  |               |
| PN 10                     |                  | 13.1 (333)                  | –                       | 11.38 (289)             | 13.7 (348)  | 204.1 (92,6)   |               |
| PN 16                     |                  | 13.9 (353)                  | –                       | 11.38 (289)             | 13.7 (348)  | 224.6 (101,9)  |               |
| PN 25                     |                  | 15.0 (381)                  | –                       | 11.38 (289)             | 13.7 (348)  | 269.4 (122,2)  |               |
| PN 40                     |                  | 16.8 (427)                  | –                       | 11.38 (289)             | 13.7 (348)  | 347.9 (157,8)  |               |
| PN 63/64                  |                  | 18.8 (478)                  | –                       | 11.38 (289)             | 13.7 (348)  | 431.2 (195,6)  |               |
| PN 100                    |                  | 21.2 (538)                  | –                       | 11.38 (289)             | 13.7 (348)  | 644.1 (292,2)  |               |
| JIS 10K                   |                  | 15.7 (399)                  | –                       | 11.38 (289)             | 13.7 (348)  | 222.9 (101,1)  |               |
| JIS 20K                   |                  | 15.7 (399)                  | –                       | 11.38 (289)             | 13.7 (348)  | 284.2 (128,9)  |               |
| JIS 40K                   |                  | 19.6 (498)                  | –                       | 11.38 (289)             | 13.7 (348)  | 493.8 (224,0)  |               |

**Figure 3. Rosemount 8800DR Reducer Flowmeter (1-in. through 12-in./25 through 300 mm Line Sizes)**

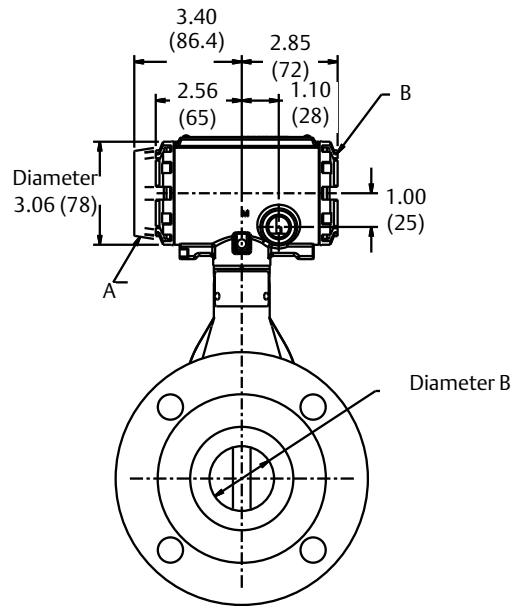


- A. Display Option
- B. Terminal Cover

**Diagram illustrated without MTA option**

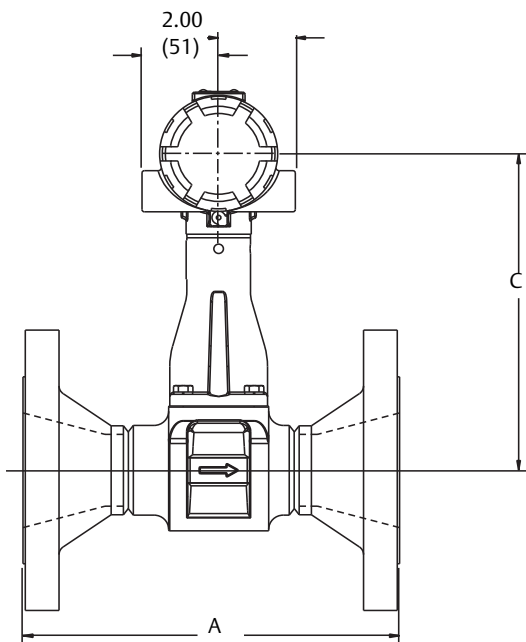

**Diagram illustrated with MTA option**

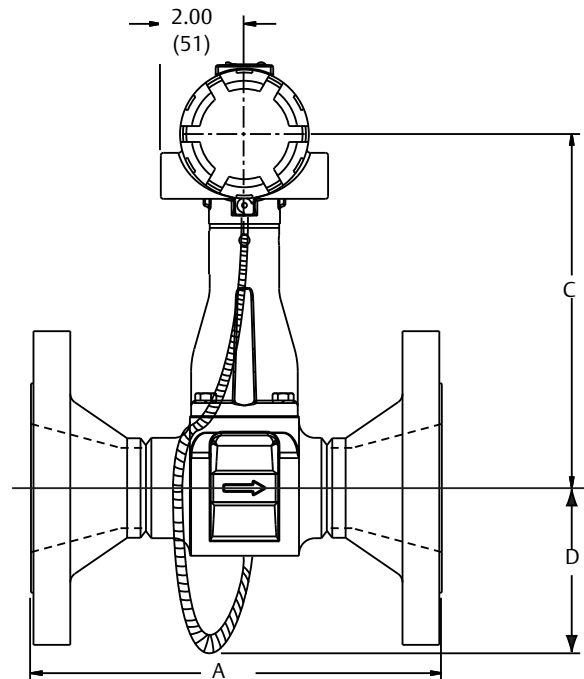

Dimensions are in inches (millimeters).


Table 24. Reducer Flowmeter (1-in. through 3-in./25 through 80 mm Line Sizes)

| Nominal size<br>inch (mm) | Flange<br>rating | Face-to-face A<br>inch (mm) | A-ANSI RTJ<br>inch (mm) | Diameter B<br>inch (mm) | C<br>inch (mm) | Weight<br>lb (kg) |
|---------------------------|------------------|-----------------------------|-------------------------|-------------------------|----------------|-------------------|
| 1 (25)                    | Class 150        | 7.5 (191)                   | 8.0 (203)               | 0.54 (13,7)             | 7.6 (193)      | 11.56 (5,24)      |
|                           | Class 300        | 8.0 (203)                   | 8.5 (216)               | 0.54 (13,7)             | 7.6 (193)      | 14.22 (6,45)      |
|                           | Class 600        | 8.5 (216)                   | 8.5 (216)               | 0.54 (13,7)             | 7.6 (193)      | 15.11 (6,85)      |
|                           | Class 900        | 9.4 (239)                   | 9.4 (239)               | 0.54 (13,7)             | 7.6 (193)      | 20.70 (9,40)      |
|                           | PN 16/40         | 6.2 (157)                   | -                       | 0.54 (13,7)             | 7.6 (193)      | 12.64 (5,73)      |
| 1 ½ (40)                  | PN 100           | 7.7 (196)                   | -                       | 0.54 (13,7)             | 7.6 (193)      | 18.44 (8,36)      |
|                           | Class 150        | 8.2 (208)                   | 8.7 (221)               | 0.95 (24,1)             | 7.7 (196)      | 15.81 (7,17)      |
| 1 ½ (40)                  | Class 300        | 8.7 (221)                   | 9.2 (234)               | 0.95 (24,1)             | 7.7 (196)      | 21.20 (9,62)      |
|                           | Class 600        | 9.3 (236)                   | 9.3 (236)               | 0.95 (24,1)             | 7.7 (196)      | 23.77 (10,78)     |
|                           | Class 900        | 10.3 (262)                  | 10.3 (262)              | 0.95 (24,1)             | 7.7 (196)      | 34.98 (15,87)     |
|                           | PN 16/40         | 6.9 (175)                   | -                       | 0.95 (24,1)             | 7.7 (196)      | 17.50 (7,94)      |
|                           | PN 100           | 8.2 (208)                   | -                       | 0.95 (24,1)             | 7.7 (196)      | 26.20 (11,88)     |
|                           | PN 160           | 8.4 (213)                   | -                       | 0.95 (24,1)             | 7.7 (196)      | 27.67 (12,55)     |
|                           | Class 150        | 9.2 (234)                   | 9.7 (246)               | 1.49 (37,8)             | 8.1 (206)      | 22.61 (10,26)     |
| 2 (50)                    | Class 300        | 9.7 (246)                   | 10.4 (264)              | 1.49 (37,8)             | 8.1 (206)      | 26.76 (12,14)     |
|                           | Class 600        | 10.5 (267)                  | 10.6 (269)              | 1.49 (37,8)             | 8.1 (206)      | 30.59 (13,88)     |
|                           | Class 900        | 12.7 (323)                  | 12.9 (328)              | 1.49 (37,8)             | 8.1 (206)      | 60.76 (27,56)     |
|                           | PN 16/40         | 8.0 (203)                   | -                       | 1.49 (37,8)             | 8.1 (206)      | 23.52 (10,67)     |
|                           | PN 63/64         | 9.1 (231)                   | -                       | 1.49 (37,8)             | 8.1 (206)      | 31.28 (14,19)     |
|                           | PN 100           | 9.6 (244)                   | -                       | 1.49 (37,8)             | 8.1 (206)      | 37.25 (16,90)     |
| 3 (80)                    | PN 160           | 10.2 (259)                  | -                       | 1.49 (37,8)             | 8.1 (206)      | 39.64 (17,98)     |
|                           | Class 150        | 9.9 (251)                   | 10.4 (264)              | 1.92 (48,8)             | 8.5 (216)      | 33.15 (15,04)     |
|                           | Class 300        | 10.6 (269)                  | 11.2 (284)              | 1.92 (48,8)             | 8.5 (216)      | 42.66 (19,35)     |
|                           | Class 600        | 11.4 (290)                  | 11.5 (292)              | 1.92 (48,8)             | 8.5 (216)      | 49.46 (22,43)     |
|                           | Class 900        | 12.9 (328)                  | 13.0 (330)              | 1.92 (48,8)             | 8.5 (216)      | 73.28 (33,24)     |
|                           | PN 16/40         | 8.9 (226)                   | -                       | 1.92 (48,8)             | 8.5 (216)      | 33.30 (15,10)     |
|                           | PN 63/64         | 10.0 (254)                  | -                       | 1.92 (48,8)             | 8.5 (216)      | 42.45 (19,25)     |
|                           | PN 100           | 10.5 (267)                  | -                       | 1.92 (48,8)             | 8.5 (216)      | 52.21 (23,68)     |
| PN 160                    | 11.1 (282)       | -                           | 1.92 (48,8)             | 8.5 (216)               | 57.94 (26,28)  |                   |

**Table 25. Reducer Flowmeter (4-in. through 12-in./100 through 300mm Line Sizes) (refer to previous drawing)**

| Nominal size<br>inch (mm) | Flange rating | Face-to-face A<br>inch (mm) | A ANSI RTJ<br>inch (mm) | Diameter B<br>inch (mm) | C inch (mm) | Weight lb (kg)  |
|---------------------------|---------------|-----------------------------|-------------------------|-------------------------|-------------|-----------------|
| 4 (100)                   | Class 150     | 10.3 (262)                  | 10.8 (274)              | 2.87 (72,9)             | 9.1 (231)   | 46.33 (21,01)   |
|                           | Class 300     | 11.0 (279)                  | 11.6 (295)              | 2.87 (72,9)             | 9.1 (231)   | 67.04 (30,41)   |
|                           | Class 600     | 12.8 (325)                  | 12.9 (328)              | 2.87 (72,9)             | 9.1 (231)   | 94.26 (42,76)   |
|                           | Class 900     | 13.8 (351)                  | 13.9 (353)              | 2.87 (72,9)             | 9.1 (231)   | 118.04 (53,54)  |
|                           | PN 16         | 8.4 (213)                   | –                       | 2.87 (72,9)             | 9.1 (231)   | 36.36 (16,49)   |
|                           | PN 40         | 9.4 (239)                   | –                       | 2.87 (72,9)             | 9.1 (231)   | 45.89 (20,81)   |
|                           | PN 63/64      | 10.4 (264)                  | –                       | 2.87 (72,9)             | 9.1 (231)   | 59.72 (27,09)   |
|                           | PN 100        | 11.3 (287)                  | –                       | 2.87 (72,9)             | 9.1 (231)   | 76.73 (34,80)   |
|                           | PN 160        | 12.1 (307)                  | –                       | 2.87 (72,9)             | 9.1 (231)   | 84.73 (38,43)   |
| 6 (150)                   | Class 150     | 11.6 (295)                  | 12.1 (307)              | 3.79 (96,3)             | 9.6 (244)   | 70.27 (31,87)   |
|                           | Class 300     | 12.3 (312)                  | 13.0 (330)              | 3.79 (96,3)             | 9.6 (244)   | 113.09 (51,30)  |
|                           | Class 600     | 14.3 (363)                  | 14.4 (366)              | 3.79 (96,3)             | 9.6 (244)   | 185.13 (83,97)  |
|                           | Class 900     | 16.1 (409)                  | 16.2 (411)              | 3.79 (96,3)             | 9.6 (244)   | 246.33 (111,73) |
|                           | PN 16         | 8.9 (226)                   | –                       | 3.79 (96,3)             | 9.6 (244)   | 59.20 (26,85)   |
|                           | PN 40         | 10.5 (267)                  | –                       | 3.79 (96,3)             | 9.6 (244)   | 81.94 (37,17)   |
|                           | PN 63/64      | 12.1 (307)                  | –                       | 3.79 (96,3)             | 9.6 (244)   | 125.36 (56,86)  |
|                           | PN 100        | 13.6 (345)                  | –                       | 3.79 (96,3)             | 9.6 (244)   | 162.29 (73,61)  |
|                           | PN 160        | 14.7 (373)                  | –                       | 3.79 (96,3)             | 9.6 (244)   | 187.91 (85,23)  |
| 8 (200)                   | Class 150     | 13.5 (343)                  | 14.0 (356)              | 5.70 (144,8)            | 10.8 (274)  | 124 (56)        |
|                           | Class 300     | 14.3 (363)                  | 14.9 (378)              | 5.70 (144,8)            | 10.8 (274)  | 186 (84)        |
|                           | Class 600     | 16.5 (419)                  | 16.7 (424)              | 5.70 (144,8)            | 10.8 (274)  | 295 (134)       |
|                           | PN 10         | 10.4 (264)                  | –                       | 5.70 (144,8)            | 10.8 (274)  | 91 (41)         |
|                           | PN 16         | 10.4 (264)                  | –                       | 5.70 (144,8)            | 10.8 (274)  | 91 (41)         |
|                           | PN 25         | 11.8 (300)                  | –                       | 5.70 (144,8)            | 10.8 (274)  | 124 (56)        |
|                           | PN 40         | 12.5 (318)                  | –                       | 5.70 (144,8)            | 10.8 (274)  | 145 (66)        |
|                           | PN 63/64      | 14.2 (361)                  | –                       | 5.70 (144,8)            | 10.8 (274)  | 211 (96)        |
|                           | PN 100        | 15.8 (401)                  | –                       | 5.70 (144,8)            | 10.8 (274)  | 283 (128)       |
| 10 (250)                  | Class 150     | 14.5 (368)                  | 15.0 (381)              | 7.55 (191,8)            | 11.7 (297)  | 182.45 (82,76)  |
|                           | Class 300     | 15.8 (401)                  | 16.4 (417)              | 7.55 (191,8)            | 11.7 (297)  | 281.66 (127,76) |
|                           | Class 600     | 19.0 (483)                  | 19.2 (488)              | 7.55 (191,8)            | 11.7 (297)  | 489.89 (222,21) |
|                           | PN 10         | 11.9 (302)                  | –                       | 7.55 (191,8)            | 11.7 (297)  | 138.63 (62,88)  |
|                           | PN 16         | 12.0 (305)                  | –                       | 7.55 (191,8)            | 11.7 (297)  | 148.58 (67,39)  |
|                           | PN 25         | 13.5 (343)                  | –                       | 7.55 (191,8)            | 11.7 (297)  | 191.00 (86,64)  |
|                           | PN 40         | 14.8 (376)                  | –                       | 7.55 (191,8)            | 11.7 (297)  | 245.85 (111,52) |
|                           | PN 63/64      | 16.4 (417)                  | –                       | 7.55 (191,8)            | 11.7 (297)  | 314.13 (142,49) |
|                           | PN 100        | 18.9 (480)                  | –                       | 7.55 (191,8)            | 11.7 (297)  | 463.49 (210,24) |
| 12 (300)                  | Class 150     | 16.8 (427)                  | 17.3 (439)              | 9.56 (242,8)            | 12.8 (325)  | 281.98 (127,90) |
|                           | Class 300     | 18.0 (457)                  | 18.6 (472)              | 9.56 (242,8)            | 12.8 (325)  | 412.18 (186,96) |
|                           | Class 600     | 20.5 (521)                  | 20.6 (523)              | 9.56 (242,8)            | 12.8 (325)  | 609.89 (296,64) |
|                           | PN 10         | 13.1 (333)                  | –                       | 9.56 (242,8)            | 12.8 (325)  | 188.28 (85,40)  |
|                           | PN 16         | 13.9 (353)                  | –                       | 9.56 (242,8)            | 12.8 (325)  | 211.79 (96,07)  |
|                           | PN 25         | 15.0 (381)                  | –                       | 9.56 (242,8)            | 12.8 (325)  | 262.45 (119,05) |
|                           | PN 40         | 16.8 (427)                  | –                       | 9.56 (242,8)            | 12.8 (325)  | 349.92 (158,72) |
|                           | PN 63/64      | 18.8 (478)                  | –                       | 9.56 (242,8)            | 12.8 (325)  | 444.21 (201,49) |
|                           | PN 100        | 21.2 (538)                  | –                       | 9.56 (242,8)            | 12.8 (325)  | 672.07 (304,85) |

Figure 4. Wafer-Style (1/2-in. through 8-in./15 through 200 mm Line Sizes)

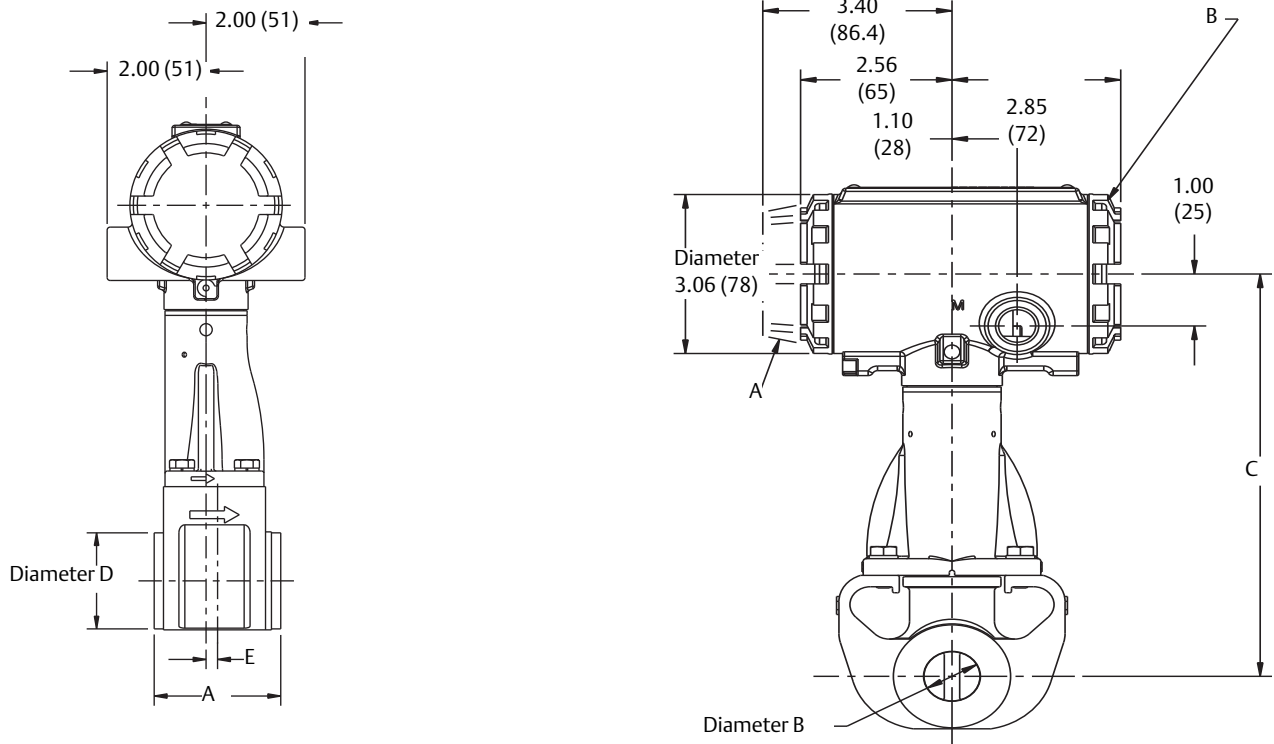

A. Display Option

B. Terminal Cover


Dimensions are in inches (millimeters).  
Electronics housing may be rotated in 90 degree increments.

Table 26. Rosemount 8800D Wafer-Style Meter

| Nominal size<br>inch (mm) | Face-to-face A<br>inch (mm) | Diameter B<br>inch (mm) | C<br>inch (mm) | E<br>inch (mm) | Weight<br>lb (kg) <sup>(1)</sup> |
|---------------------------|-----------------------------|-------------------------|----------------|----------------|----------------------------------|
| 1/2 (15)                  | 2.56 (65)                   | 0.52 (13,2)             | 7.63 (194)     | 0.17 (4,3)     | 6.8 (3,1)                        |
| 1 (25)                    | 2.56 (65)                   | 0.95 (24,1)             | 7.74 (197)     | 0.23 (5,9)     | 7.4 (3,4)                        |
| 1 1/2 (40)                | 2.56 (65)                   | 1.49 (37,8)             | 8.14 (207)     | 0.18 (4,6)     | 10.0 (4,5)                       |
| 2 (50)                    | 2.56 (65)                   | 1.92 (49)               | 8.85 (225)     | 0.12 (3)       | 10.6 (4,8)                       |
| 3 (80)                    | 2.56 (65)                   | 2.87 (73)               | 9.62 (244)     | 0.25 (6)       | 13.6 (6,2)                       |
| 4 (100)                   | 3.42 (87)                   | 3.79 (96)               | 10.48 (266)    | 0.44 (11)      | 21.4 (9,7)                       |
| 6 (150)                   | 5.00 (127)                  | 5.70 (145)              | 10.29 (261)    | 0.30 (7,6)     | 36 (16)                          |
| 8 (200)                   | 6.60 (168)                  | 7.55 (192)              | 11.22 (285)    | 0.70 (17,8)    | 62 (28)                          |

(1) Add 0.2 lb (0,1 kg) for display option.


**Figure 5. Vortex Dual-Sensor Style Flowmeter (1/2-in. through 4-in. /15 through 100 mm Line Sizes)**

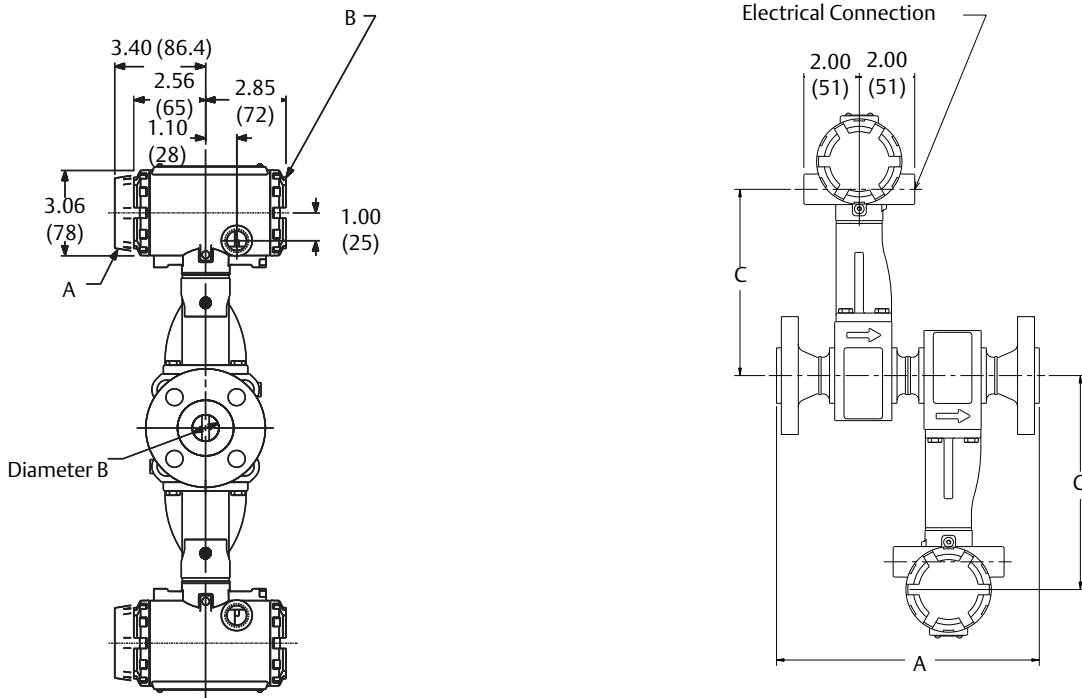

A. Display Option

B. Terminal Cover

**Figure 6. Vortex Dual-Sensor Style Flowmeter (6-in. through 12-in./150 through 300 mm Line Sizes)**

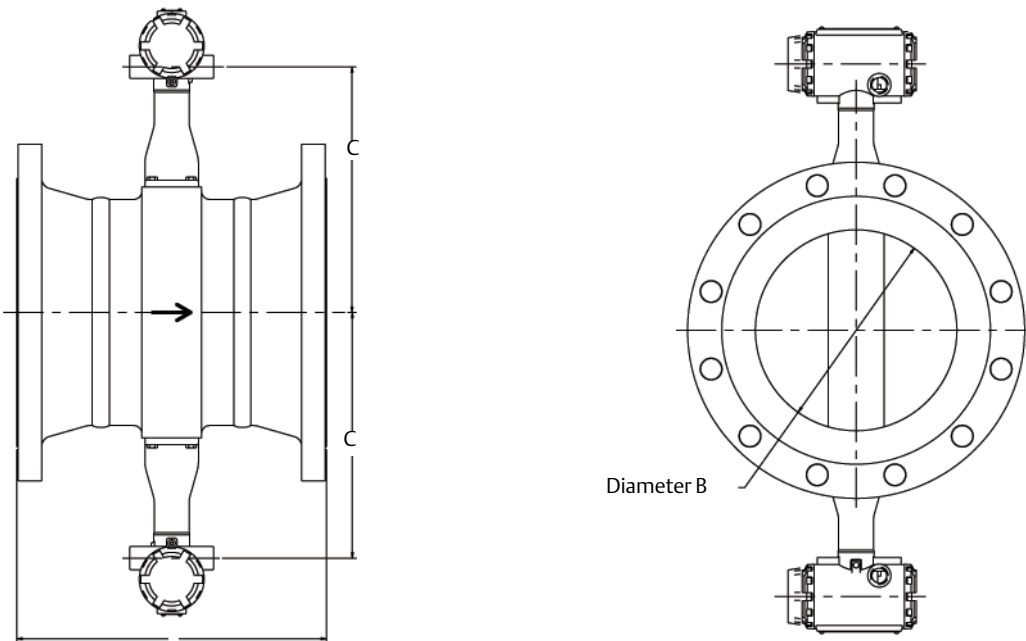

Dimensions are in inches (millimeters).

Table 27. Vortex Dual-Sensor Style Flowmeter (1/2-in. through 3-in./15 through 80 mm Line Sizes)

| Nominal size<br>inch (mm) | Flange<br>rating       | Face-to-face A<br>inch (mm) | A ANSI RTJ<br>inch (mm) | Diameter B<br>inch (mm) | C<br>inch (mm) | Weight<br>lb (kg) |
|---------------------------|------------------------|-----------------------------|-------------------------|-------------------------|----------------|-------------------|
| 1/2 (15)                  | Class 150              | 11.9 (302)                  | –                       | 0.54 (13,7)             | 7.6 (193)      | 16.2 (7,4)        |
|                           | Class 300              | 12.3 (312)                  | 12.7 (323)              | 0.54 (13,7)             | 7.6 (193)      | 17.4 (7,9)        |
|                           | Class 600              | 12.8 (325)                  | 12.7 (323)              | 0.54 (13,7)             | 7.6 (193)      | 17.9 (8,1)        |
|                           | Class 900              | 13.4 (340)                  | 13.4 (340)              | 0.54 (13,7)             | 7.6 (193)      | 22.7 (10,3)       |
|                           | PN 16/40               | 11.2 (284)                  | –                       | 0.54 (13,7)             | 7.6 (193)      | 17.4 (7,9)        |
|                           | PN 100                 | 11.7 (297)                  | –                       | 0.54 (13,7)             | 7.6 (193)      | 19.4 (8,8)        |
| JIS 10K/20K<br>JIS 40K    | JIS 10K/20K            | 11.4 (290)                  | –                       | 0.54 (13,7)             | 7.6 (193)      | 17.3 (7,8)        |
|                           | JIS 40K                | 12.4 (315)                  | –                       | 0.54 (13,7)             | 7.6 (193)      | 20.8 (9,4)        |
| 1 (25)                    | Class 150              | 15.0 (381)                  | 15.6 (396)              | 0.95 (24,1)             | 7.7 (196)      | 20.7 (9,4)        |
|                           | Class 300              | 15.6 (396)                  | 16.1 (409)              | 0.95 (24,1)             | 7.7 (196)      | 23.3 (10,6)       |
|                           | Class 600              | 16.1 (409)                  | 16.1 (409)              | 0.95 (24,1)             | 7.7 (196)      | 24.2 (11,0)       |
|                           | Class 900              | 16.9 (429)                  | 16.9 (429)              | 0.95 (24,1)             | 7.7 (196)      | 32.8 (14,9)       |
|                           | Class 1500             | 16.9 (429)                  | 16.9 (429)              | 0.95 (24,1)             | 7.7 (196)      | 32.8 (14,9)       |
|                           | PN 16/40               | 13.8 (351)                  | –                       | 0.95 (24,1)             | 7.7 (196)      | 21.9 (9,9)        |
|                           | PN 100                 | 15.3 (389)                  | –                       | 0.95 (24,1)             | 7.7 (196)      | 28.0 (12,7)       |
|                           | PN 160                 | 15.3 (389)                  | –                       | 0.95 (24,1)             | 7.7 (196)      | 28.0 (12,7)       |
|                           | JIS 10K/20K<br>JIS 40K | JIS 10K/20K                 | 14.0 (356)              | –                       | 0.95 (24,1)    | 7.7 (196)         |
| JIS 40K                   | 15.4 (391)             | –                           | 0.95 (24,1)             | 7.7 (196)               | 26.08 (11,8)   |                   |
| 1 1/2 (40)                | Class 150              | 11.3 (287)                  | 11.8 (300)              | 1.49 (37,8)             | 8.1 (206)      | 27.0 (12,3)       |
|                           | Class 300              | 11.8 (300)                  | 12.3 (312)              | 1.49 (37,8)             | 8.1 (206)      | 32.4 (14,7)       |
|                           | Class 600              | 12.4 (315)                  | 12.4 (315)              | 1.49 (37,8)             | 8.1 (206)      | 34.8 (15,8)       |
|                           | Class 900              | 13.4 (340)                  | 13.4 (340)              | 1.49 (37,8)             | 8.1 (206)      | 45.9 (20,8)       |
|                           | Class 1500             | 13.4 (340)                  | 13.4 (340)              | 1.49 (37,8)             | 8.1 (206)      | 45.9 (20,8)       |
|                           | PN 16/40               | 9.9 (251)                   | –                       | 1.49 (37,8)             | 8.1 (206)      | 28.7 (13,0)       |
|                           | PN 100                 | 11.3 (287)                  | –                       | 1.49 (37,8)             | 8.1 (206)      | 37.4 (17,0)       |
|                           | PN 160                 | 11.4 (290)                  | –                       | 1.49 (37,8)             | 8.1 (206)      | 38.8 (17,6)       |
|                           | JIS 10K/20K<br>JIS 40K | JIS 10K/20K                 | 10.3 (262)              | –                       | 1.49 (37,8)    | 8.1 (206)         |
| JIS 40K                   | 11.5 (292)             | –                           | 1.49 (37,8)             | 8.1 (206)               | 34.9 (15,8)    |                   |
| 2 (50)                    | Class 150              | 13.0 (330)                  | 13.5 (343)              | 1.92 (48,8)             | 8.5 (216)      | 31.9 (14,5)       |
|                           | Class 300              | 13.5 (343)                  | 14.0 (356)              | 1.92 (48,8)             | 8.5 (216)      | 35.9 (16,3)       |
|                           | Class 600              | 14.3 (363)                  | 14.3 (363)              | 1.92 (48,8)             | 8.5 (216)      | 39.4 (17,9)       |
|                           | Class 900              | 16.5 (419)                  | 16.7 (424)              | 1.92 (48,8)             | 8.5 (216)      | 69.1 (31,4)       |
|                           | Class 1500             | 15.6 (396)                  | 15.7 (399)              | 1.67 (42,4)             | 8.5 (216)      | 72.4 (32,9)       |
|                           | PN 16/40               | 11.8 (300)                  | –                       | 1.92 (48,8)             | 8.5 (216)      | 32.8 (14,9)       |
|                           | PN 63/64               | 12.9 (328)                  | –                       | 1.92 (48,8)             | 8.5 (216)      | 40.4 (18,3)       |
|                           | PN 100                 | 13.4 (340)                  | –                       | 1.92 (48,8)             | 8.5 (216)      | 46.2 (20,9)       |
|                           | PN 160                 | 13.9 (353)                  | –                       | 1.92 (48,8)             | 8.5 (216)      | 48.4 (21,9)       |
|                           | JIS 10K                | 11.5 (292)                  | –                       | 1.92 (48,8)             | 8.5 (216)      | 29.1 (13,2)       |
|                           | JIS 20K                | 12.0 (305)                  | –                       | 1.92 (48,8)             | 8.5 (216)      | 30.0 (13,6)       |
|                           | JIS 40K                | 13.6 (345)                  | –                       | 1.92 (48,8)             | 8.5 (216)      | 38.1 (13,6)       |
| 3 (80)                    | Class 150              | 14.3 (363)                  | 14.8 (376)              | 2.87 (72,9)             | 9.1 (231)      | 50.6 (23,0)       |
|                           | Class 300              | 15.0 (381)                  | 15.7 (399)              | 2.87 (72,9)             | 9.1 (231)      | 59.9 (27,2)       |
|                           | Class 600              | 15.8 (401)                  | 15.9 (404)              | 2.87 (72,9)             | 9.1 (231)      | 65.9 (29,9)       |
|                           | Class 900              | 17.3 (439)                  | 17.4 (442)              | 2.87 (72,9)             | 9.1 (231)      | 88.4 (40,8)       |
|                           | Class 1500             | 18.5 (470)                  | 18.7 (475)              | 2.60 (66,0)             | 9.1 (232)      | 123.8 (56,2)      |
|                           | PN 16/40               | 13.4 (340)                  | –                       | 2.87 (72,9)             | 9.1 (231)      | 50.0 (22,7)       |
|                           | PN 63/64               | 14.5 (367)                  | –                       | 2.87 (72,9)             | 9.1 (231)      | 58.7 (26,6)       |
|                           | PN 100                 | 14.9 (378)                  | –                       | 2.87 (72,9)             | 9.1 (231)      | 68.0 (30,9)       |
|                           | PN 160                 | 15.6 (396)                  | –                       | 2.87 (72,9)             | 9.1 (231)      | 73.4 (33,3)       |
|                           | JIS 10K                | 12.3 (312)                  | –                       | 2.87 (72,9)             | 9.1 (231)      | 41.4 (18,8)       |
|                           | JIS 20K                | 13.7 (348)                  | –                       | 2.87 (72,9)             | 9.1 (231)      | 48.8 (22,1)       |
|                           | JIS 40K                | 15.5 (394)                  | –                       | 2.87 (72,9)             | 9.1 (231)      | 63.7 (28,9)       |

**Table 28. Vortex Dual-Sensor Style Flowmeter (4-in. through 12-in./100 through 300 mm Line Sizes)**


| Nominal size<br>inch (mm) | Flange<br>rating | Face-to-face A<br>inch (mm) | A ANSI RTJ<br>inch (mm) | Diameter B<br>inch (mm) | C<br>inch (mm) | Weight<br>lb (kg) |            |
|---------------------------|------------------|-----------------------------|-------------------------|-------------------------|----------------|-------------------|------------|
| 4 (100)                   | Class 150        | 15.2 (386)                  | 15.7 (399)              | 3.79 (96,3)             | 9.6 (244)      | 69.7 (31.6)       |            |
|                           | Class 300        | 16.0 (406)                  | 16.6 (422)              | 3.79 (96,3)             | 9.6 (244)      | 88.9 (40.8)       |            |
|                           | Class 600        | 17.7 (450)                  | 17.9 (454)              | 3.79 (96,3)             | 9.6 (244)      | 116 (52.5)        |            |
|                           | Class 900        | 18.7 (475)                  | 18.9 (480)              | 3.79 (96,3)             | 9.6 (244)      | 139 (63.1)        |            |
|                           | Class 1500       | 20.0 (509)                  | 20.2 (512)              | 3.40 (86.4)             | 9.6 (244)      | 184 (83,3)        |            |
|                           | PN 16            | 13.3 (338)                  | –                       | 3.79 (96,3)             | 9.6 (244)      | 58.7 (26,6)       |            |
|                           | PN 40            | 14.4 (366)                  | –                       | 3.79 (96,3)             | 9.6 (244)      | 67.8 (30,8)       |            |
|                           | PN 63/64         | 15.4 (391)                  | –                       | 3.79 (96,3)             | 9.6 (244)      | 80.8 (36,7)       |            |
|                           | PN 100           | 16.3 (414)                  | –                       | 3.79 (96,3)             | 9.6 (244)      | 97.2 (44,1)       |            |
|                           | PN 160           | 17.1 (434)                  | –                       | 3.79 (96,3)             | 9.6 (244)      | 104 (47,4)        |            |
|                           | JIS 10K          | 13.6 (345)                  | –                       | 3.79 (96,3)             | 9.6 (244)      | 55.8 (25,3)       |            |
|                           | JIS 20K          | 13.6 (345)                  | –                       | 3.79 (96,3)             | 9.6 (244)      | 63.8 (28,9)       |            |
|                           | JIS 40K          | 16.8 (427)                  | –                       | 3.79 (96,3)             | 9.6 (244)      | 94.2 (42,7)       |            |
|                           | 6 (150)          | Class 150                   | 11.6 (295)              | 12.1 (307)              | 5.7 (144,8)    | 10.8 (274)        | 85 (39)    |
|                           |                  | Class 300                   | 12.3 (312)              | 13.0 (330)              | 5.7 (144,8)    | 10.8 (274)        | 124 (57)   |
| Class 600                 |                  | 14.3 (363)                  | 14.4 (366)              | 5.7 (144,8)             | 10.8 (274)     | 191 (87)          |            |
| Class 900                 |                  | 16.1 (409)                  | 16.2 (411)              | 5.14 (130.6)            | 10.8 (274)     | 282 (128)         |            |
| Class 1500                |                  | 18.6 (472)                  | 18.8 (478)              | 5.14 (130.6)            | 10.8 (274)     | 380 (173)         |            |
| PN 16                     |                  | 8.9 (226)                   | –                       | 5.7 (144,8)             | 10.8 (274)     | 70 (32)           |            |
| PN 40                     |                  | 10.5 (267)                  | –                       | 5.7 (144,8)             | 10.8 (274)     | 90 (41)           |            |
| PN 63/64                  |                  | 12.1 (307)                  | –                       | 5.7 (144,8)             | 10.8 (274)     | 134 (61)          |            |
| PN 100                    |                  | 13.6 (345)                  | –                       | 5.7 (144,8)             | 10.8 (274)     | 164 (75)          |            |
| JIS 10K                   |                  | 10.6 (269)                  | –                       | 5.7 (144,8)             | 10.8 (274)     | 74 (34)           |            |
| JIS 20K                   |                  | 10.6 (269)                  | –                       | 5.7 (144,8)             | 10.8 (274)     | 92 (42)           |            |
| JIS 40K                   |                  | 14.2 (361)                  | –                       | 5.7 (144,8)             | 10.8 (274)     | 170 (77)          |            |
| 8 (200)                   | Class 150        | 13.5 (343)                  | 14.0 (356)              | 7.55 (191,8)            | 11.7 (297)     | 146 (66)          |            |
|                           | Class 300        | 14.3 (363)                  | 14.9 (378)              | 7.55 (191,8)            | 11.7 (297)     | 203 (92)          |            |
|                           | Class 600        | 16.5 (419)                  | 16.7 (424)              | 7.55 (191,8)            | 11.7 (297)     | 303 (138)         |            |
|                           | Class 900        | 18.8 (478)                  | 18.9 (480)              | 6.62 (168,1)            | 11.7 (297)     | 484 (220)         |            |
|                           | Class 1500       | 22.8 (580)                  | 23.2 (589)              | 6.62 (168,1)            | 11.7 (297)     | 657 (299)         |            |
|                           | PN 10            | 10.4 (264)                  | –                       | 7.55 (191,8)            | 11.7 (297)     | 115 (52)          |            |
|                           | PN 16            | 10.4 (264)                  | –                       | 7.55 (191,8)            | 11.7 (297)     | 114 (52)          |            |
|                           | PN 25            | 11.8 (300)                  | –                       | 7.55 (191,8)            | 11.7 (297)     | 142 (65)          |            |
|                           | PN 40            | 12.5 (318)                  | –                       | 7.55 (191,8)            | 11.7 (297)     | 161 (73)          |            |
|                           | PN 63/64         | 14.2 (361)                  | –                       | 7.55 (191,8)            | 11.7 (297)     | 221 (101)         |            |
|                           | PN 100           | 15.8 (401)                  | –                       | 7.55 (191,8)            | 11.7 (297)     | 287 (130)         |            |
|                           | JIS 10K          | 12.2 (310)                  | –                       | 7.55 (191,8)            | 11.7 (297)     | 114 (52)          |            |
|                           | JIS 20K          | 12.2 (310)                  | –                       | 7.55 (191,8)            | 11.7 (297)     | 139 (63)          |            |
|                           | JIS 40K          | 16.5 (419)                  | –                       | 7.55 (191,8)            | 11.7 (297)     | 260 (118)         |            |
|                           | 10 (250)         | Class 150                   | 14.5 (368)              | 15.0 (381)              | 9.56 (243)     | 12.8 (325)        | 202 (91,6) |
| Class 300                 |                  | 15.8 (401)                  | 16.4 (417)              | 9.56 (243)              | 12.8 (325)     | 290 (132)         |            |
| Class 600                 |                  | 19.0 (483)                  | 19.2 (488)              | 9.56 (243)              | 12.8 (325)     | 482 (219)         |            |
| PN 10                     |                  | 11.9 (302)                  | –                       | 9.56 (243)              | 12.8 (325)     | 161 (73,2)        |            |
| PN 16                     |                  | 12.0 (305)                  | –                       | 9.56 (243)              | 12.8 (325)     | 166 (75,4)        |            |
| PN 25                     |                  | 13.5 (343)                  | –                       | 9.56 (243)              | 12.8 (325)     | 203 (92,0)        |            |
| PN 40                     |                  | 14.8 (376)                  | –                       | 9.56 (243)              | 12.8 (325)     | 251 (114)         |            |
| PN 63/64                  |                  | 16.4 (417)                  | –                       | 9.56 (243)              | 12.8 (325)     | 312 (142)         |            |
| PN 100                    |                  | 18.9 (480)                  | –                       | 9.56 (243)              | 12.8 (325)     | 450 (204)         |            |
| JIS 10K                   |                  | 14.5 (368)                  | –                       | 9.56 (243)              | 12.8 (325)     | 179 (81,1)        |            |
| JIS 20K                   |                  | 14.5 (368)                  | –                       | 9.56 (243)              | 12.8 (325)     | 226 (103)         |            |
| JIS 40K                   |                  | 18.1 (460)                  | –                       | 9.56 (243)              | 12.8 (325)     | 383 (174)         |            |



**Table 28. Vortex Dual-Sensor Style Flowmeter (4-in. through 12-in./100 through 300 mm Line Sizes)**

|          |            |            |             |             |            |            |
|----------|------------|------------|-------------|-------------|------------|------------|
| 12 (300) | Class 150  | 16.8 (427) | 17.3 (439)  | 11.38 (289) | 13.7 (348) | 302 (137)  |
|          | Class 300  | 18.0 (457) | 18.7 (475)  | 11.38 (289) | 13.7 (348) | 420 (191)  |
|          | Class 600  | 20.5 (521) | 20.7 (526)  | 11.38 (289) | 13.7 (348) | 600 (272)  |
|          | PN 10      | 13.1 (331) | –           | 11.38 (289) | 13.7 (348) | 208 (94,5) |
|          | PN 16      | 13.9 (353) | –           | 11.38 (289) | 13.7 (348) | 229 (104)  |
|          | PN 25      | 15.0 (381) | –           | 11.38 (289) | 13.7 (348) | 274 (124)  |
|          | PN 40      | 16.8 (427) | –           | 11.38 (289) | 13.7 (348) | 352 (160)  |
|          | PN 63/64   | 18.8 (478) | –           | 11.38 (289) | 13.7 (348) | 435 (198)  |
|          | PN 100     | 21.2 (538) | –           | 11.38 (289) | 13.7 (348) | 648 (294)  |
|          | JIS 10K    | 15.7 (399) | –           | 11.38 (289) | 13.7 (348) | 227 (103)  |
| JIS 20K  | 15.7 (399) | –          | 11.38 (289) | 13.7 (348)  | 288 (131)  |            |
| JIS 40K  | 19.6 (498) | –          | 11.38 (289) | 13.7 (348)  | 498 (226)  |            |

**Figure 7. Vortex Weld-End Style Flowmeter (1/2-in. through 4-in. [15 - 100 mm] Line Sizes)**

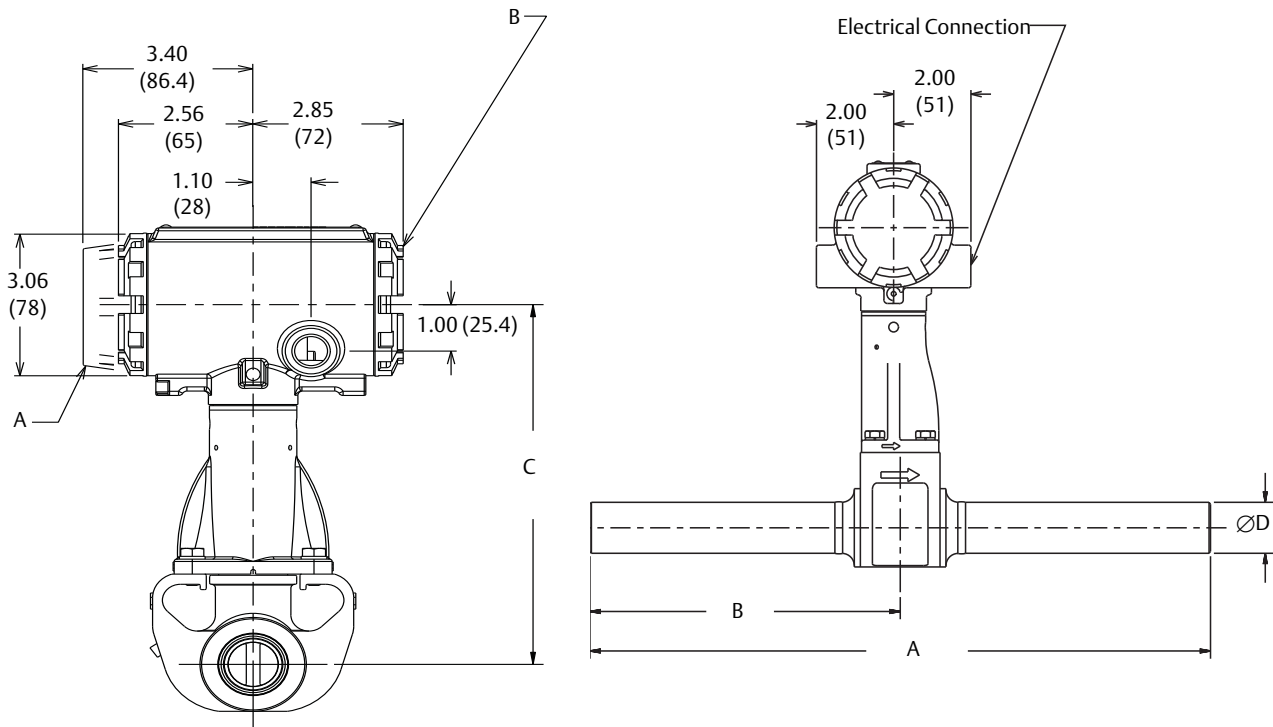


A. Display Option  
B. Terminal Cover

**Table 29. Vortex Weld-End Style Flowmeter (1/2-in. through 4-in. [15 - 100 mm] Line Sizes)**

| Nominal size in. (mm) | A in. (mm) | B in. (mm) | C ± 0.20 in. (5.1 mm) | Diameter D ± 0.031 in. (0.79 mm) |
|-----------------------|------------|------------|-----------------------|----------------------------------|
| 0.5                   | 16.0 (406) | 8.0 (203)  | 7.63 (194)            | .840 (21.34)                     |
| 1                     | 16.0 (406) | 8.0 (203)  | 7.74 (197)            | 1.315 (33.40)                    |
| 1.5                   | 16.0 (406) | 8.0 (203)  | 8.14 (207)            | 1.900 (48.26)                    |
| 2                     | 16.0 (406) | 8.0 (203)  | 8.49 (216)            | 2.375 (60.33)                    |
| 3                     | 16.0 (406) | 8.0 (203)  | 9.05 (230)            | 3.500 (88.90)                    |
| 4                     | 16.0 (406) | 8.0 (203)  | 9.60 (244)            | 4.500 (114.30)                   |

**Figure 8. Remote Mount Transmitters**

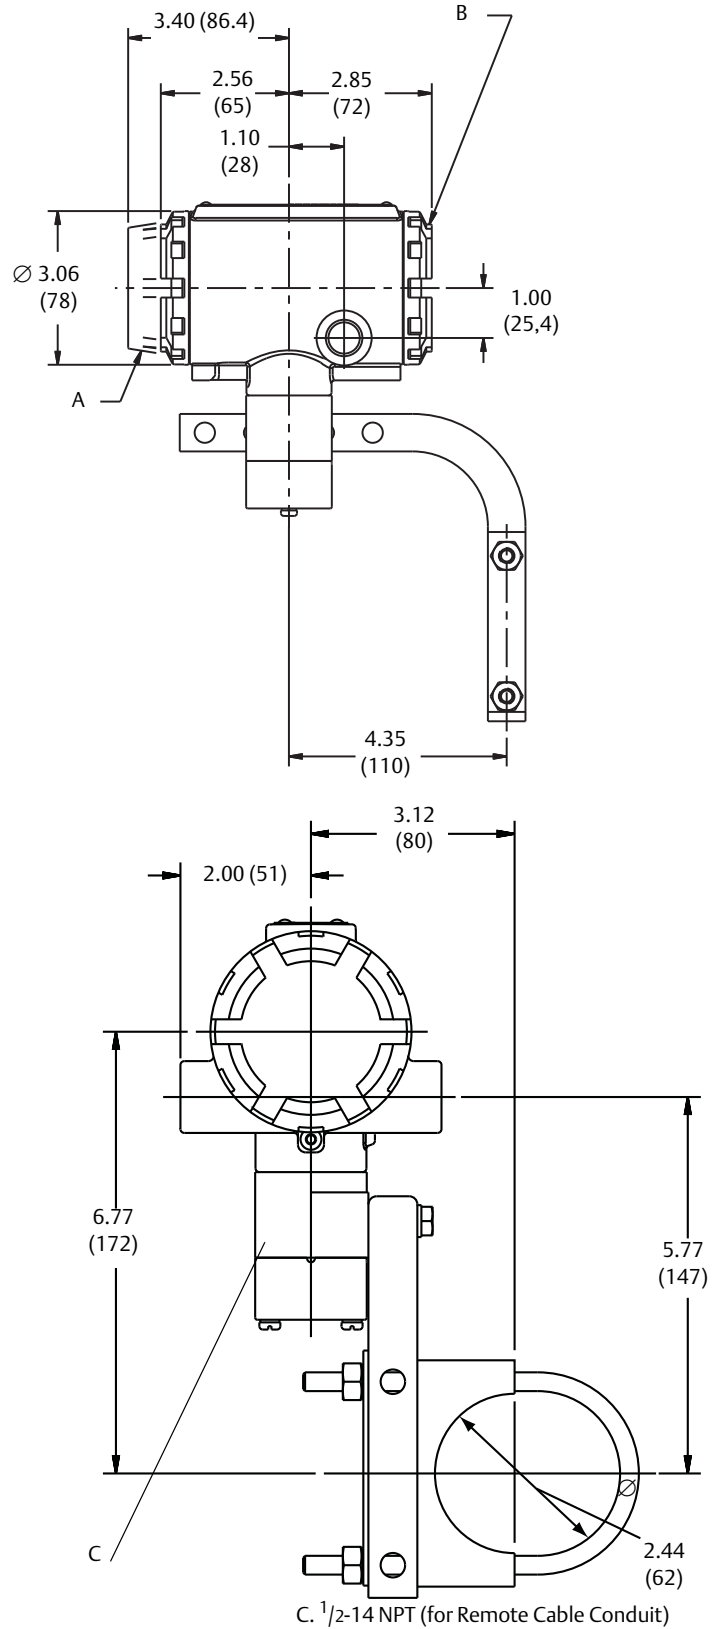


**Note**  
 Consult factory for SST installation.  
 Dimensions are in inches (millimeters).

A. Display Option  
 B. Terminal Cover

C. 1/2-14 NPT (for Remote Cable Conduit)

Figure 9. Remote Mount Wafer-Style Flowmeters ( $1\frac{1}{2}$ -in. through 8-in./15 through 200 mm Line Sizes)

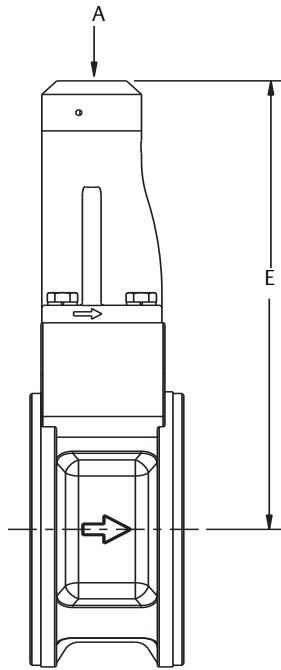


A.  $1\frac{1}{2}$ -14 NPT (for Remote Cable Conduit)

Table 30. Rosemount 8800D Wafer-Style Meter

| Nominal size inch (mm) | E Wafer style inch (mm) |
|------------------------|-------------------------|
| $\frac{1}{2}$ (15)     | 6.3 (160)               |
| 1 (25)                 | 6.5 (165)               |
| $1\frac{1}{2}$ (40)    | 6.7 (191)               |
| 2 (50)                 | 7.5 (191)               |
| 3 (80)                 | 8.3 (211)               |
| 4 (100)                | 9.2 (234)               |
| 6 (150)                | 9.5 (241)               |
| 8 (200)                | 10.4 (264)              |

**Figure 10. Flanged-and Dual Sensor Flanged-Style Remote Mount Flowmeters ( $\frac{1}{2}$ -through 12-inch/15 through 300 mm Line Sizes)**

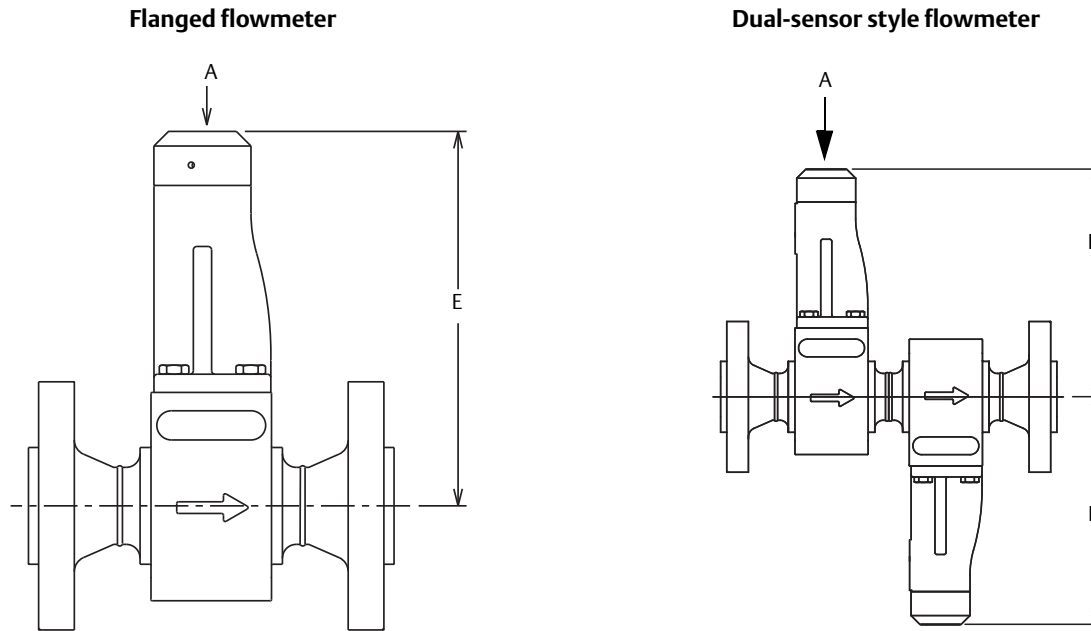

A.  $\frac{1}{2}$ -14 NPT (for Remote Cable Conduit)

**Table 31. Remote Mount, Flanged-and Dual Sensor Flowmeter Dimensions**

| Nominal size inch (mm) | E Flange style inch (mm) |
|------------------------|--------------------------|
| $\frac{1}{2}$ (15)     | 6.4 (162)                |
| 1 (25)                 | 6.5 (165)                |
| $1\frac{1}{2}$ (40)    | 6.8 (173)                |
| 2 (50)                 | 7.2 (183)                |
| 3 (80)                 | 7.8 (198)                |
| 4 (100)                | 8.3 (211)                |
| 6 (150)                | 9.5 (241)                |
| 8 (200)                | 10.4 (264)               |
| 10 (250)               | 11.4 (290)               |
| 12 (300)               | 12.3 (313)               |

**Emerson Process Management**

Rosemount Inc.  
8200 Market Boulevard  
Chanhassen, MN 55317 USA  
T (U.S.) 1-800-522-6277  
T (International) (303) 527-5200  
F (303) 530-8549  
[www.rosemount.com](http://www.rosemount.com)

**Emerson Process Management**

Asia Pacific Pte Ltd  
1 Pandan Crescent  
Singapore 128461  
T +65 6777 8211  
F +65 6777 0947  
Service Support Hotline: +65 6770 8711  
Email: [Enquiries@AP.EmersonProcess.com](mailto:Enquiries@AP.EmersonProcess.com)  
[www.rosemount.com](http://www.rosemount.com)

**Emerson Process Management**

**Flow**  
Neonstraat 1  
6718 WX Ede  
The Netherlands  
T +31 (0)318 495555  
F +31(0) 318 495556  
[www.rosemount.com](http://www.rosemount.com)

**Emerson Process Management**

**Latin America**  
1300 Concord Terrace, Suite 400  
Sunrise, Florida 33323 USA  
T + 1 954 846 5030  
[www.rosemount.com](http://www.rosemount.com)

Standard Terms and Conditions of Sale can be found at [www.rosemount.com/terms\\_of\\_sale](http://www.rosemount.com/terms_of_sale).  
The Emerson logo is a trade mark and service mark of Emerson Electric Co.  
AMS, Rosemount, and the Rosemount logotype are registered trademarks of Rosemount Inc.  
CriticalProcess, DeltaV, MultiVariable, and Reducer Vortex are trademarks of Rosemount Inc.  
PlantWeb is a registered trademark of one of the Emerson Process Management group of companies.  
HART is a registered trademark of the HART Communication Foundation.  
FOUNDATION fieldbus is a trademark of the Fieldbus Foundation.  
eurofast and minifast are registered trademarks of TURCK.  
NACE is a registered trademark of NACE International.  
All other marks are the property of their respective owners.  
© 2014 Rosemount Inc. All rights reserved.